


Boxed Intel® Pentium® 4 Processor Installation Notes

Before installing the processor, please consider integration issues found in the installation notes available on the World Wide Web.

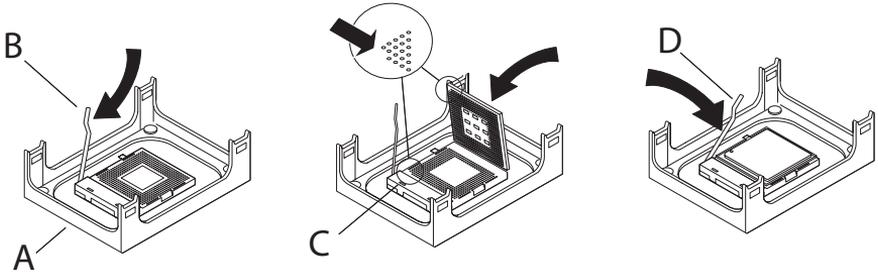

Install the processor retention mechanism (A) following the motherboard manufacturer's installation instructions. Open the socket handle (B). Install the processor by carefully aligning the pins to the socket (C). Close the socket handle (D).

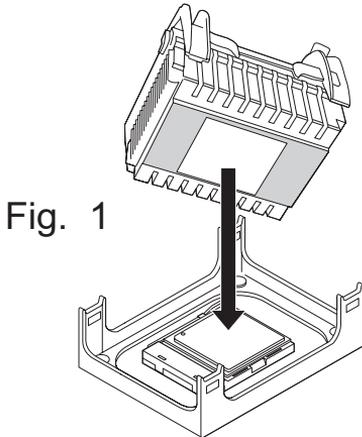


Fig. 1




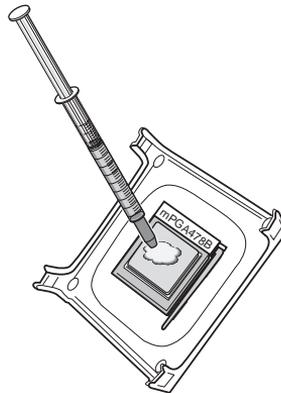


Fig. 2

The heatsink may have thermal interface material attached to the bottom as shown in Fig. 1. (Be careful not to damage the thermal interface material.) If not, use the enclosed syringe and apply all of the thermal interface material to the top of the processor as shown in Fig. 2.

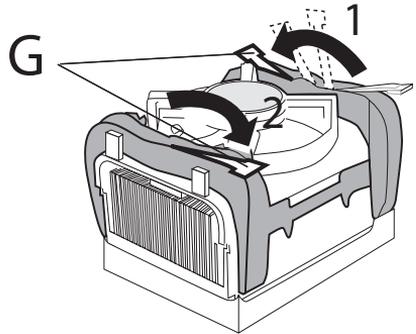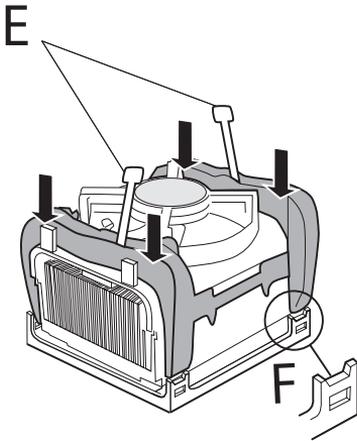

Align the heatsink and clip assembly with the retention mechanism and place it on the processor. The heatsink is symmetrical. With the clip levers in the up position (E), push down on all four clip frame corners to secure to the retention mechanism hooks (F). Close the clip levers (G) (levers require force to be completely closed).

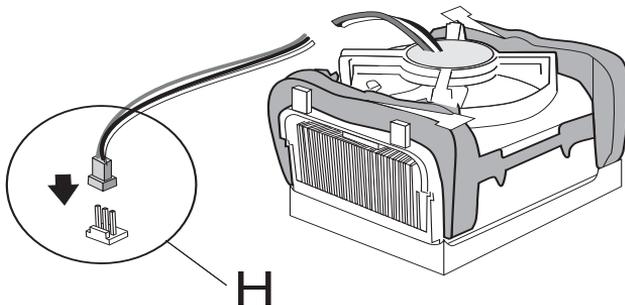

Connect the processor fan cable connector (H) to the motherboard header.

Copyright © Intel Corporation 2001
Part Number A66630-001

First Edition August 2001