


Attention!

This flyer contains critical information on installing the fan heatsink and clip assembly for the boxed Intel® Pentium® 4 processor in the 478-pin FC-PGA2 package. It is very important that you comply with all instructions and warnings to ensure proper functionality of the fan heatsink.

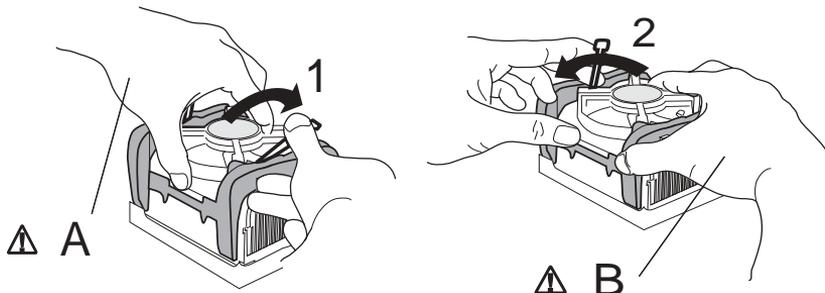

When installing the fan heatsink and clip assembly, it is important to not allow the heatsink to rotate or twist on the processor. Securing the fan heatsink while closing the clip levers will ensure the thermal interface material is not damaged and the processor will operate correctly (the thermal interface material, between the processor and heatsink, is attached to the heatsink).

Make sure to close the clip levers one at a time. Close the clip lever (1), while holding the topside of the fan heatsink with your other hand (A). Then, close the clip lever (2), while holding the topside of the fan heatsink with your other hand (B).

Prior to installing this product, please check for the latest information on the Pentium 4 processor at the following website:

URL: <http://support.intel.com/support/processors/pentium4/>

Copyright © Intel Corporation 2001.

*Third-party brands and names are the property of their respective owners.

Part Number A69401-001
First Edition August 2001