

Intel AppUpSM Small Business Service

Built on the Intel[®] Hybrid Cloud Platform

User Guide – Astaro^{*}

1. Log into Astaro Web Console:

Local - <https://192.168.77.1:4444>

External - https://<external_ip>:4444

Default username: **admin**

Default password:


Download the current “Appliance Default Password List” (LogIn required):

1) Use a web browser go to: www.intelhybridcloud.com/


2) Click the “LOGIN” button and enter your login information.

3) Select the “Support” link from the menu on the left.


4) On the “Support” page, download the “Additional Setup Documents” and extract the “Appliance Default Password List” from the zip file.

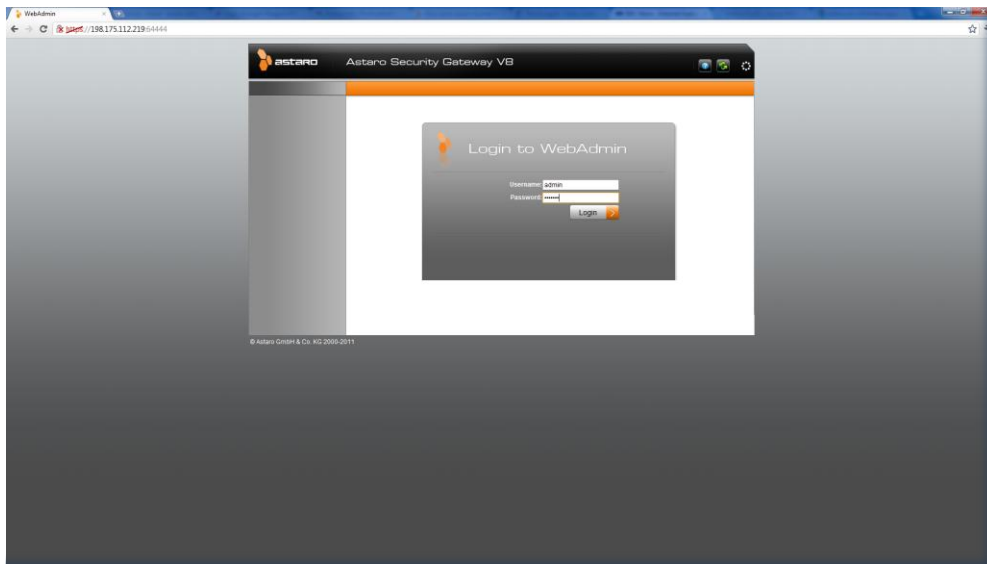

2. In the Astaro Web Console, go to **Management**; select **Licensing**; select the **Installation** tab.

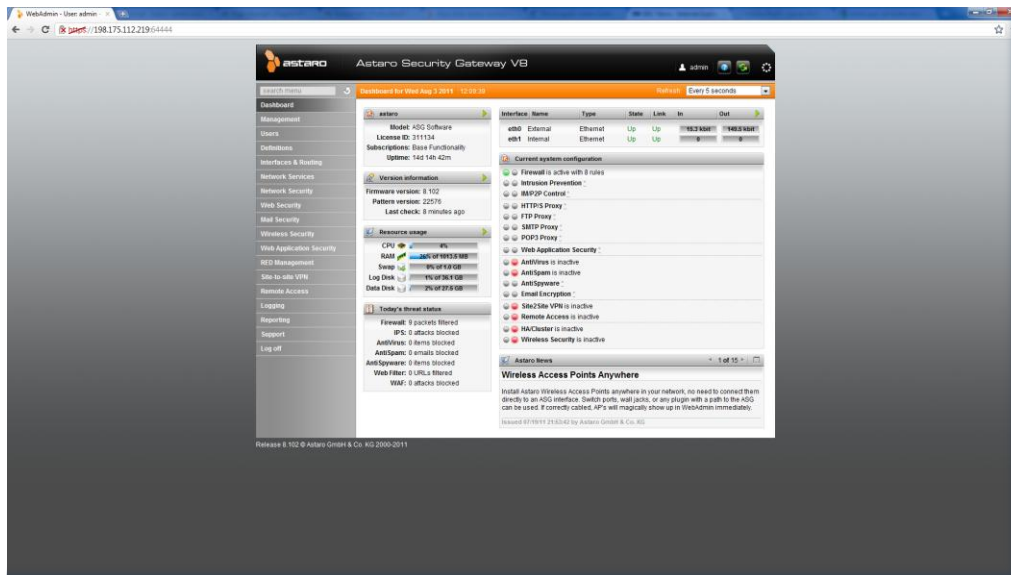

3. Click on the folder icon next to the **License File** text box.

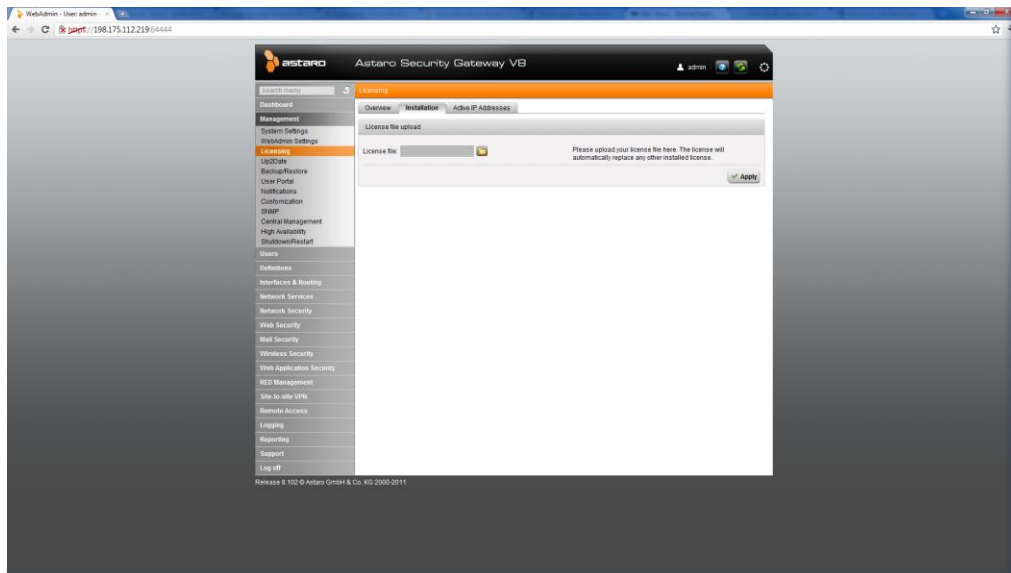

4. Click on the **Choose File** button. Select the Astaro license text file to initiate load.
5. Once file upload is complete, click the **Apply** button. Text will indicate that **'New License Installed Successfully'**.
6. To view setting accuracy, click on the **Overview** tab. Check that features included in the license are enabled.