


3). Install the CPUs

The 486-POS provides an onboard Socket 3 socket for processors.

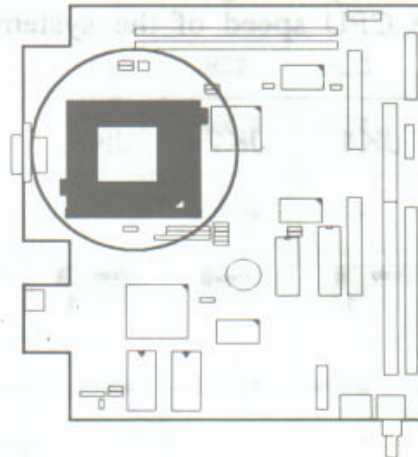

CAUTION :

1. Always turn the system power off before installing or removing any device.
2. Always observe static electricity precautions.
3. Inserting the CPU chip incorrectly may damage the chip.

To install the CPU, do the following:

1. Lift the lever on the side of the CPU socket.
2. Handle the chip by its edges and try not to touch any of the pins.
3. Place the CPU in the socket. The chip has a notch to correctly orientate the chip. Align the notch with pin one of the socket. Pin one is located in the triangular blank area. Do not force the chip. The CPU should slide easily into the socket.
4. Swing the lever to the down position to lock the CPU in place.
5. See the following section for information on the CPU jumper settings.

To remove the CPU, simply reverse the procedures introduced above.