


Installation Instructions

NOTE : Always observe static electricity precautions. See "Handling Precautions" at the start of this manual.

1. Locate the SIMM on the mainboard.

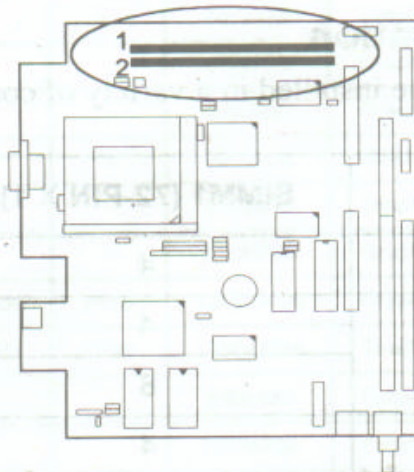

2. Carefully fit a SIMM at a 45 degree angle into each of the empty sockets to be populated. All the SIMMs should be facing the same direction.
3. Swing each SIMM into its upright, locked position. When locking a SIMM in place, push on each end of the SIMM - do not push in the middle.

Remove SIMMs

To remove the SIMMs, pull the retaining latch on both ends of the socket and reverse the procedure above.