

Clear Password: CMOS_CLR

The password clear jumper lets you set the password configuration to "Enabled" or "Disabled". You may need to enable password clear if forget your password.

 Enable

1

 Disable (Default)

1