

SIDE A : PINS AND PIN-OUTS			SIDE B : PINS AND PIN-OUTS		
01	DAT01	01	DAT00	DAT00	
02	DAT02	02	DAT02	DAT02	
03	Ground	03	Ground	DAT04	
04	DAT05	04	DAT06	DAT06	
05	DAT07	05	Ground	Ground	
06	DAT09	06	14, 22, 29, 38, 49, 55	DAT10	
07	DAT11	07	DAT12	DAT12	
08	DAT13	08	DAT14	DAT14	
09	DAT15	09	20, 32, 57	DAT16	
10	DAT17	10	DAT18	DAT18	
11	VCC	11	DAT19	DAT19	
12	27, 40, 53	12	DAT20	DAT20	
13	DAT21	13	DAT22	DAT22	
14	DAT23	14	DAT24	DAT24	
15	DAT25	15	DAT26	DAT26	
16	DAT27	16	DAT28	DAT28	
17	DAT29	17	DAT30	DAT30	
18	DAT31	18	DAT32	DAT32	
19	DAT33	19	DAT34	DAT34	
20	DAT35	20	DAT36	DAT36	
21	DAT37	21	DAT38	DAT38	
22	DAT39	22	DAT40	DAT40	
23	DAT41	23	DAT42	DAT42	
24	DAT43	24	DAT44	DAT44	
25	DAT45	25	DAT46	DAT46	
26	DAT47	26	DAT48	DAT48	
27	DAT49	27	DAT50	DAT50	
28	DAT51	28	DAT52	DAT52	
29	DAT53	29	DAT54	DAT54	
30	DAT55	30	DAT56	DAT56	
31	DAT57	31	DAT58	DAT58	
32	DAT59	32	DAT60	DAT60	
33	DAT61	33	DAT62	DAT62	
34	DAT63	34	DAT64	DAT64	
35	DAT65	35	DAT66	DAT66	
36	DAT67	36	DAT68	DAT68	
37	DAT69	37	DAT70	DAT70	
38	DAT71	38	DAT72	DAT72	
39	DAT73	39	DAT74	DAT74	
40	DAT75	40	DAT76	DAT76	
41	DAT77	41	DAT78	DAT78	
42	DAT79	42	DAT80	DAT80	
43	DAT81	43	DAT82	DAT82	
44	DAT83	44	DAT84	DAT84	
45	DAT85	45	DAT86	DAT86	
46	DAT87	46	DAT88	DAT88	
47	DAT89	47	DAT90	DAT90	
48	DAT91	48	DAT92	DAT92	
49	DAT93	49	DAT94	DAT94	
50	DAT95	50	DAT96	DAT96	
51	DAT97	51	DAT98	DAT98	
52	DAT99	52	DAT100	DAT100	
53	DAT101	53	DAT102	DAT102	
54	DAT103	54	DAT104	DAT104	
55	DAT105	55	DAT106	DAT106	
56	DAT107	56	DAT108	DAT108	
57	DAT109	57	DAT110	DAT110	
58	DAT111	58	DAT112	DAT112	

Table 2-18. SL7 Local Bus Connector Pin Assignment

486-VP-IO

SIDE A : PINS AND PIN-OUTS			SIDE B : PINS AND PIN-OUTS		
01	DAT01	01	DAT00	DAT00	
02	DAT02	02	DAT02	DAT02	
03	Ground	03	Ground	DAT04	
04	DAT05	04	DAT06	DAT06	
05	DAT07	05	Ground	Ground	
06	DAT09	06	14, 22, 29, 38, 49, 55	DAT10	
07	DAT11	07	DAT12	DAT12	
08	DAT13	08	DAT14	DAT14	
09	DAT15	09	20, 32, 57	DAT16	
10	DAT17	10	DAT18	DAT18	
11	VCC	11	DAT19	DAT19	
12	27, 40, 53	12	DAT20	DAT20	
13	DAT21	13	DAT22	DAT22	
14	DAT23	14	DAT24	DAT24	
15	DAT25	15	DAT26	DAT26	
16	DAT27	16	DAT28	DAT28	
17	DAT29	17	DAT30	DAT30	
18	DAT31	18	DAT32	DAT32	
19	DAT33	19	DAT34	DAT34	
20	DAT35	20	DAT36	DAT36	
21	DAT37	21	DAT38	DAT38	
22	DAT39	22	DAT40	DAT40	
23	DAT41	23	DAT42	DAT42	
24	DAT43	24	DAT44	DAT44	
25	DAT45	25	DAT46	DAT46	
26	DAT47	26	DAT48	DAT48	
27	DAT49	27	DAT50	DAT50	
28	DAT51	28	DAT52	DAT52	
29	DAT53	29	DAT54	DAT54	
30	DAT55	30	DAT56	DAT56	
31	DAT57	31	DAT58	DAT58	
32	DAT59	32	DAT60	DAT60	
33	DAT61	33	DAT62	DAT62	
34	DAT63	34	DAT64	DAT64	
35	DAT65	35	DAT66	DAT66	
36	DAT67	36	DAT68	DAT68	
37	DAT69	37	DAT70	DAT70	
38	DAT71	38	DAT72	DAT72	
39	DAT73	39	DAT74	DAT74	
40	DAT75	40	DAT76	DAT76	
41	DAT77	41	DAT78	DAT78	
42	DAT79	42	DAT80	DAT80	
43	DAT81	43	DAT82	DAT82	
44	DAT83	44	DAT84	DAT84	
45	DAT85	45	DAT86	DAT86	
46	DAT87	46	DAT88	DAT88	
47	DAT89	47	DAT90	DAT90	
48	DAT91	48	DAT92	DAT92	
49	DAT93	49	DAT94	DAT94	
50	DAT95	50	DAT96	DAT96	
51	DAT97	51	DAT98	DAT98	
52	DAT99	52	DAT100	DAT100	
53	DAT101	53	DAT102	DAT102	
54	DAT103	54	DAT104	DAT104	
55	DAT105	55	DAT106	DAT106	
56	DAT107	56	DAT108	DAT108	
57	DAT109	57	DAT110	DAT110	
58	DAT111	58	DAT112	DAT112	

Table 2-19. SL8 Local Bus Connector Pin Assignment

486-VP-IO