











Winbond 83777/787F Printer Mode Selection

	<i>Print (Default)</i>	<i>EPP/SPP</i>	<i>EPP/ECP</i>	<i>EXT2FDD</i>
<i>JW3</i>				
<i>JW4</i>				

Winbond 83777/787F ECP Mode DMA Channel Selection

	<i>DMA 1 (Default)</i>	<i>DMA 3</i>
<i>JW5</i>		
<i>JW6</i>	