

Kapitel 1 Installation

Kennwort löschen: SW1-6.....	2
CMOS löschen: SW1-5	2
Flash-EPROM-Wahlschalter: EP1, EP2.....	3
Prozessorinterne Frequenz: SW1-1, SW1-2, SW1-3, SW1-4	4

Kapitel 2 BIOS-Einrichtung

Konfigurationsprogramm.....	5
Standard CMOS Setup	6
Festplattenkonfiguration.....	6
Software Turbo Speed	7
BIOS Features Setup.....	7
Chipset Features Setup.....	10
Power Management Setup.....	12
PNP/PCI Configuration	16
Load BIOS Defaults	17
Load Setup Defaults.....	17
Integrated Peripherals	17
Kennworte	21
Autom. Festplattenerkennung (IDE HDD Auto Detection).....	22
Save and Exit Setup	23
Exit without Saving.....	23

Diese Seite bleibt absichtlich frei.