

Table of Contents

Chapter 1 Installation Procedures

Clear CMOS: SW1-5.....	2
Clear Password: SW1-6.....	2
Flash ROM Type Selection: EP1, EP2.....	3
Keyboard and Mouse Power-On Feature: KB_PWN	3
CPU Internal Frequency: SW-1, SW-2, SW-3, SW-4	4

Chapter 2 BIOS Setup

CMOS Setup Utility.....	5
Standard CMOS Setup.....	6
Hard Disk Configurations.....	6
Software Turbo Speed	7
BIOS Features Setup.....	7
Chipset Features Setup.....	9
Power Management Setup.....	12
PNP/PCI Configuration	16
Load BIOS Defaults	17
Load Setup Defaults.....	17
Integrated Peripherals	18
Supervisor/User Password.....	22
IDE HDD Auto Detection.....	23
Save and Exit Setup	24
Exit without Saving.....	24