

Kapitel 1 Installation

Kennwort löschen: CPW	2
CMOS löschen: CMOS_CLR	2
Auswahl des Flash ROM: EP1, EP2	3
CPU-Bustakt-Verhältnis: FREQ	3
Intel Pentium-II-CPUs	4

Kapitel 2 BIOS-Einrichtung

CMOS-Hauptseite	6
Load Defaults	6
Standard CMOS Setup	6
Auto Detection of Hard Disks on Bootup	8
Software Turbo Speed	9
BIOS Features Setup	9
Chipset Features Setup	12
Power Management Setup	15
PNP and PCI Configuration Setup	19
Load BIOS Defaults	20
Load Setup Defaults	21
Integrated Peripherals	21
Supervisor Password und User Password	24
IDE HDD Auto Detection	25
Save and Exit Setup	26
Exit Without Saving	26