

PA-2010+

MAINBOARD MANUAL

DOC No. : 15639

Rev. : A1

Date : 8, 1997

Part No. : 25-10609-12

Handling Precautions

Warning :

1. Static electricity may cause damage to the integrated circuits on the mainboard.
Before handling any mainboard outside of its protective packaging, ensure that there is no static electric charge in your body.
2. There is a danger of explosion if the battery is incorrectly replaced.
Replace only with the same or an equivalent type recommended by the manufacturer.
3. Discard used batteries according to the manufacturer's instructions.

Observe the following basic precautions when handling the mainboard or other computer components:

- Wear a static wrist strap which fits around your wrist and is connected to a natural earth ground.
- Touch a grounded or anti-static surface or a metal fixture such as a water pipe.
- Avoid contacting the components on add-on cards, boards and modules and with the “gold finger” connectors plugged into the expansion slot. It is best to handle system components by their mounting bracket.

The above methods prevent static build-up and cause it to be discharged properly.

Trademark

All trademarks mentioned in this manual are registered property of the respective owners.

Copyright

This manual may not, in whole or in part, be photocopied, reproduced, transcribed, translated, or transmitted in whatsoever form without the written consent of the manufacturer, except for copies retained by the purchaser for personal archival purposes.

Table of Contents

This manual explains the most important aspects regarding the installation of your mainboard including jumper settings and BIOS Setup. For fuller information about your mainboard, please consult the English version of this manual.

Chapter 1 Installation Procedures

Setting System Jumpers.....	2
Clear Password: CPW	2
Flash EPROM Type Selection: EP1, EP2.....	3
CPU to SRAM Data Transacting Mode Selection: SRAM.....	3
Installing the CPU.....	4
CPU External Clock (Bus) Frequency: CLK1, CLK2, CLK3.....	4
CPU to Bus Frequency Ratio: FREQ1, FREQ2, FREQ3.....	5

Chapter 2 Award BIOS Setup

CMOS Setup Utility.....	7
Standard CMOS Setup.....	8
Hard Disk Configuration.....	8
BIOS Features Setup.....	10
Chipset Features Setup.....	13
Power Management Setup.....	18
PCI Configuration Setup.....	21
PnP Configuration Setup.....	23
Load BIOS Defaults.....	24
Load Setup Defaults.....	24
Supervisor/User Password.....	24
IDE HDD Auto Detection.....	25
Save and Exit Setup.....	26
Exit without Saving.....	26
