

Table of Contents

Chapter 1 Overview

Main Features	2
This User Manual	4
Something Interesting.....	5
The BIOS Setup Utility	5
IRQ Functionality.....	6
DMA Channels of ISA Cards	7
Enhanced IDE	7
Serial Infrared (SIR) Connections.....	8
Highly Convenient Integrated I/O Connectors	9

Chapter 2 Installation Procedures

Mainboard Layout	12
1). Set System Jumpers	13
Jumpers	13
Clear Password: CPW	14
Flash EPROM Type Selection: EP1, EP2	14
CPU to SRAM Data Transacting Mode Selection: SRAM3 ...	15
2). Install DRAM Modules.....	16
DRAM and SDRAM	16
RAM Module Configuration.....	17
Install SIMMs	20
Remove SIMMs	20
Install DIMMs	21
Remove DIMMs.....	21
Cache Memory.....	22
Install Cache SRAM Module.....	22
Onboard Cache SRAM (256KB/512KB)	23
Onboard Cache SRAM and SDRAM Module Mixture (512KB/1MB).....	24
SRAM Module (256KB/512KB)	25
3). Install the CPUs.....	26
System Clock Selection:	
CLK1, CLK2, CLK3.....	27

CPU to Bus Frequency Ratio Selection:	
FREQ1, FREQ2.....	27
Intel Pentium CPUs	28
Frequency.....	28
Voltage.....	29
AMD-K5/K6 CPUs.....	30
Frequency.....	30
Voltage.....	31
Cyrix 6x86 CPUs.....	32
Frequency.....	32
Voltage.....	33
IBM 6x86 CPUs	34
Frequency.....	34
Voltage.....	35
Installation of Cyrix (or IBM) 6x86 CPU Fan.....	36
4). Install Expansion Cards	37
5). Connect Cables and Power Supply	39
Keyboard Connector: AT_KB	39
Serial Port Connectors: COM1 and COM2.....	39
CPU Fan Connectors: FAN	40
Floppy Diskette Drive Connector: FLOPPY	40
Front Panel Block Connector: F_PNL	41
Infrared Connector: IR	42
Outlet Connector: OUTLET	42
Power Connector: POWER	43
IDE HDD Device Connectors:	
PRIMARY and SECONDARY	44
Printer Block Connector: PRINTER	44
Remote Power Connector: RPW_CON.....	45
Universal Serial Bus Connector: USB1 and USB2	
(Reserved For Future Upgrade).....	45

Chapter 3 Award BIOS Setup

CMOS Setup Utility.....	47
Standard CMOS Setup	48
BIOS Features Setup	50

Chipset Features Setup.....	53
Power Management Setup.....	58
PCI Configuration Setup.....	61
PnP Configuration Setup	63
Load BIOS Defaults	64
Load Setup Defaults.....	64
Supervisor/User Password.....	64
IDE HDD Auto Detection.....	65
Save and Exit Setup	66
Exit without Saving.....	66

Appendix A Applicatin Note

This Page Intentionally Left Blank