

## Table of Contents

### Chapter 1 Overview

Package Checklist .....	1
The PA-2013 Motherboard.....	2
Main Features .....	3
Intelligent Properities .....	5
ACPI Ready .....	6

### Chapter 2 Installation Procedures

1). Set System Jumpers .....	7
Jumpers .....	7
Motherboard Layout.....	8
Clear Password: CPS .....	10
Flash ROM Type Selection: EP1, EP2 .....	10
CPU to SRAM Data Transacting Mode Selection: SRAM .....	11
2). Install System RAM Modules.....	11
RAM Module Configuration.....	11
Install and Remove DIMMs.....	12
DIMM Frequency: CLK4, SDRAM .....	13
System Frequency: NBCLK1, NBCLK2 .....	13
Cache Memory.....	14
3). Install the CPU .....	15
CPU External (BUS) Frequency: CLK1, CLK2, CLK3 .....	16
CPU to Bus Frequency Ratio: FREQ1, FREQ2, FREQ3.....	16
Set CPU Frequency: .....	17
Set CPU Voltage.....	18
4). Install Expansion Cards .....	19
5). Connect Devices .....	20
Connect to Internal Devices.....	20
Floppy Diskette Drive Connector: FLOPPY .....	20
IDE HDD Device Connectors: PRIMARY, SECONDARY .....	20
ATX Power Connector: POWER.....	20
CPU Fan Connector: FAN1.....	21
Wake-On-LAN (WOL) Connector: RWU .....	21
Connect to System Case .....	22
Front Panel Block Connector: F_PNL .....	22
System Case Fan Connector: FAN2.....	24
Chassis Intrusion Alarm Connector: CHASSIS1 .....	24

Connect to External Devices.....	25
PS/2 Keyboard and Mouse Connector: KB/MS.....	25
Universal Serial Bus Connectors: USB0, USB1, F_USB .....	25
Printer Connector: LPT.....	26
Serial Port Connectors: COM1, COM2 .....	26
Infrared Connector: IR .....	26

### **Chapter 3     BIOS Setup**

CMOS Setup Utility.....	27
Standard CMOS Setup .....	28
Hard Disk Configurations.....	28
Software Turbo Speed.....	29
BIOS Features Setup.....	29
Chipset Features Setup.....	32
Power Management Setup.....	35
PNP/PCI Configuration .....	39
Load BIOS Defaults .....	41
Load Setup Defaults.....	41
Integrated Peripherals .....	42
Supervisor/User Password.....	46
IDE HDD Auto Detection.....	46
Save and Exit Setup .....	47
Exit without Saving.....	47

### **Chapter 4     Software Utilities**

Starting Installation.....	49
LANDesk Client Manager (manufacturing option).....	49
LDCM 3.21 Specification Overview.....	49
Two Options of LDCM Setup.....	50
Desktop Management Interface (DMI).....	51
Starting DMI.....	51
Editing DMI.....	51
Adding DMI.....	52
Loading DMI .....	52
Saving DMI .....	53
Bus Master IDE Driver .....	54
Installation.....	54

## Table of Contents

---

Patch for Chipset.....	55
Installation .....	55
AGP VxD Support Utility .....	56
System Requirements.....	56
Installation .....	56
BIOS Flash Software.....	57
Downloading BIOS File .....	57
Upgrading BIOS File.....	57
Loading New BIOS Defaults .....	58
Anti-Virus Tool.....	58
Hardware Requirements.....	58
Technical Notes .....	58

**This Page Left Blank for Note**