

Table of Contents

Chapter 1 Overview

Package Checklist.....	2
Main Features	3
Advanced Features	5
1). Enhanced Performance Features.....	5
2). Intelligent Features	7
PC '97 Compliant	8
ACPI Ready	9
DMI (Desktop Management Interface)	10
Serial Infrared Connections.....	11
Universal Serial Bus (USB) Functionality	12

Chapter 2 Installation Procedures

Mainboard Layout	14
1). Set System Jumpers.....	15
Jumpers	15
Power Supply Type Selection: PWR1.....	15
Clear Password: CPW	16
Flash ROM Type Selection: EP1, EP2.....	16
2). Install Sytem RAM Modules.....	17
DRAM and SDRAM.....	17
RAM Module Configuration.....	18
Install SIMMs	19
Remove SIMMs	19
Install DIMMs.....	20
Remove DIMMs	20
Cache Memory.....	21
3). Install the CPU	22
CPU External Clock (Bus) Frequency:	
CLK1, CLK2, CLK3	23
CPU to Bus Frequency Ratio:	
FREQ1, FREQ2, FREQ3	24
Intel Pentium CPUs.....	25
Frequency.....	25
Voltage.....	26
AMD-K5/K6 CPUs.....	27
Frequency.....	27

Voltage.....	28
Cyrix 6x86 CPUs	29
Frequency.....	29
Voltage.....	30
IBM 6x86 CPUs.....	31
Frequency.....	31
Voltage.....	32
4). Install Expansion Cards.....	33
5). Connector Cables and Power Supply	35
Keyboard Connector: AT_KB.....	35
Serial Port Connectors: COM1, COM2	35
CPU Fan Connector: CPU_FAN	36
System Case Fan Connector: EXT_FAN	36
Floppy Diskette Drive Connector: FLOPPY.....	37
PS/2 Mouse Connector: MS_CON	37
Front Panel Block Connector: F_PNL	38
Infrared Connector: IR	39
Standard Power Supply Connector: POWER	39
IDE HDD Device Connectors: PRIMARY, SECONDARY	40
Printer Connector: PRINTER	40
Remote Power Supply Connector: RPW_CON	41
Universal Serial Bus Connectors: USB1, USB2	41
 Chapter 3 AMI BIOS Setup	
Main Setup	43
Advanced Setup.....	44
Advanced CMOS Setup	45
Advanced Chipset Setup	49
Power Management Setup.....	52
Plug and Play Setup	56
Peripheral Setup.....	59
Security Setup.....	62
Exit Setup	64
 Appendix A Software Utilities	
DMI Utility.....	65
System Requirements	65
Editing BIOS DMI Information	65
Installing DMI Wizard	66

Starting DMI Wizard	66
Main Screen Actions.....	66
IDE Utility.....	68

Appendix B BIOS Update Instruction

Flash Process	69
---------------------	----

Appendix C ICW/PhaseLink Clock Generator

CPU External Clock (Bus) Frequency:	
CLK1, CLK2, CLK3	71
Intel Pentium CPUs.....	72
Frequency.....	72
AMD-K5/K6 CPUs	73
Frequency.....	73
Cyrix 6x86 CPUs.....	74
Frequency.....	74
IBM 6x86 CPUs.....	75
Frequency.....	75

This Page Intentionally Left Blank