

Table of Contents

Chapter 1 Installation Procedures

Clear Password: CPW	2
Flash ROM Type Selection: EP1, EP2	2
Power Supply Type Selection: PWR	3
CPU to SRAM Data Transacting Mode Selection: SRAM.....	3
DIMM Frequency: CLK4	4
System Frequency: SDRAM 1, SDRAM2, SDRAM3.....	4
CPU External (BUS) Frequency: CLK1, CLK2, CLK3	5
CPU to Bus Frequency Ratio: FREQ1, FREQ2, FREQ3.....	5

Chapter 2 BIOS Setup

CMOS Setup Utility.....	7
Standard CMOS Setup	8
Hard Disk Configurations.....	8
Software Turbo Speed	9
BIOS Features Setup.....	10
Chipset Features Setup.....	13
Power Management Setup.....	16
PNP/PCI Configuration	20
Load BIOS Defaults	22
Load Setup Defaults.....	22
Integrated Peripherals	22
Supervisor/User Password.....	26
IDE HDD Auto Detection.....	27
Save and Exit Setup	28
Exit without Saving.....	28

This Page Intentionally Left Blank