

# AN11

---

## **MAINBOARD MANUAL**

DOC No.: M00B04

Rev. : A0

Date : 11, 2001

Part No. : 25-11607-20

## Handling Precautions

### Warning:

1. Static electricity may cause damage to the integrated circuits on the motherboard. Before handling any motherboard outside of its protective packaging, ensure that there is no static electric charge in your body.
2. There is a danger of explosion if the battery is incorrectly replaced. Replace only with the same or an equivalent type recommended by the manufacturer.
3. Discard used batteries according to the manufacturer's instructions.
4. Never run the processor without the heatsink properly and firmly attached. PERMANENT DAMAGE WILL RESULT!

Observe the following basic precautions when handling the motherboard or other computer components:

- Wear a static wrist strap which fits around your wrist and is connected to a natural earth ground.
- Touch a grounded or anti-static surface or a metal fixture such as a water pipe.
- Avoid contacting the components on add-on cards, motherboards, and modules with the *golden fingers* connectors plugged into the expansion slot. It is best to handle system components by their mounting brackets.

The above methods prevent static build-up and cause it to be discharged properly.

## Trademark

*All trademarks mentioned in this manual are registered properly of the respective owners.*

## Handling Precautions

*This manual may not, in whole or in part, be photocopied, reproduced, transcribed, translated, or transmitted in whatever form without the written consent of the manufacturer, except for copies retained by the purchaser for personal archival purposes.*

---

|   |             |
|---|-------------|
| <b>Quick Reference (German)</b>             | <b>G-1</b>  |
| <b>Quick Reference (French)</b>             | <b>F-1</b>  |
| <b>Quick Reference (Spanish)</b>            | <b>S-1</b>  |
| <b>Quick Reference (Japanese)</b>           | <b>J-1</b>  |
| <b>Quick Reference (Chinese)</b>            | <b>C-1</b>  |
| <b>Quick Reference (Simplified Chinese)</b> | <b>SC-1</b> |

## **Chapter 1 Overview**

|   |     |
|---|-----|
| Package Checklist .....   | 1-2 |
| The AN11 Mainboard .....  | 1-3 |
| Main Features .....   | 1-4 |
| FIC Unique Innovation for Users (NOVUS) -<br>Enhanced Mainboard Features and System Support ..... | 1-6 |

## **Chapter 2 Installation Procedures**

|   |      |
|---|------|
| Quick Reference (from Page 2-2 to 2-5) .....                            | 2-2  |
| Mainboard Layout .....  | 2-2  |
| 1). Clear CMOS, FSB Speed Select,<br>Auto Detect CPU Core Voltage ..... | 2-3  |
| 2). Front Panel Block Cable Connection .....                            | 2-5  |
| 3). CPU Fan Installation .....  | 2-5  |
| 1). Set System Jumpers/Switches .....                                   | 2-5  |
| Clear CMOS: CLR_CMOS .....  | 2-5  |
| FSB Speed Select: FS .....  | 2-6  |
| None Over Clock Enable: JP1_4G .....                                    | 2-6  |
| Auto Detect CPU Core Voltage: ADV_EN .....                              | 2-7  |
| CPU Core Voltage Setting: ADV .....                                     | 2-7  |
| Optional RAID Function Enable: RAID_JP .....                            | 2-8  |
| 2). Install Memory Modules .....  | 2-8  |
| 3). Install the CPU .....   | 2-9  |
| 4). Install Expansion Cards .....                                       | 2-10 |
| 5). Connect Devices .....   | 2-11 |
| Floppy Diskette Drive Connector .....                                   | 2-11 |
| IDE Device Connectors .....   | 2-12 |
| ATX Power Connectors .....  | 2-12 |

|   |      |
|---|------|
| Fan Connectors .....                                    | 2-13 |
| Wake-On-Ring Connector .....                            | 2-13 |
| Wake-On-Lan Connector .....                             | 2-14 |
| Blue Tooth Audio Port Connector .....                   | 2-14 |
| CD Audio-In Connectors .....                            | 2-15 |
| Front Panel Block, Power LED and Speaker Connector .... | 2-15 |
| PS/2 Keyboard and Mouse Connector .....                 | 2-17 |
| Universal Serial Bus Connectors .....                   | 2-17 |
| Printer Connector .....                                 | 2-18 |
| Serial Port Connectors .....                            | 2-18 |
| Audio I/O Jacks .....                                   | 2-19 |
| Game/MIDI Connector .....                               | 2-19 |

### **Chapter 3 BIOS Setup**

|                                 |      |
|---------------------------------|------|
| CMOS Setup Utility .....        | 3-1  |
| Standard CMOS Setup .....       | 3-2  |
| Advanced BIOS Features .....    | 3-4  |
| Advanced Chipset Features ..... | 3-7  |
| Integrated Peripherals .....    | 3-10 |
| Power Management Setup .....    | 3-16 |
| PnP/PCI Configurations .....    | 3-20 |
| PC Health Status .....          | 3-22 |
| Frequency/Voltage Control ..... | 3-23 |
| Load Fail-Safe Defaults .....   | 3-23 |
| Load Optimized Defaults .....   | 3-24 |
| Supervisor/User Password .....  | 3-24 |
| Save and Exit Setup .....       | 3-24 |
| Exit without Saving .....       | 3-24 |

# Overview

The new Socket-A 1stMainboard® AN11 is an ATX sized motherboard supporting the latest generation of AMD Athlon® and Duron® processors at industry leading speeds. By utilizing DDR ( Double Data Rate ) transfer rate the 100/133 MHz AMD Athlon system bus effectively reaches Front Side Bus speeds of 200/266 MHz. The board allows 3 PC2100/PC1600 DDR DIMMs for up to 3 GB of DDR SDRAM.

The AN11 is based around the high performance V-link VIA KT266A® chipset comprised of VIA VT 8366A system controller for the North Bridge and the VIA VT8233® for the South Bridge. The AGP 4X functions supported by KT266A® provides the end-user a photo-realistic 3D experience suitable for the most robust 3D games and software environments. Onboard AC97 sound, embedded in VT8233, ensures high quality audio.

The mainboard also comes equipped with the new NOVUS® range of innovative features that assist in the installation and maintenance. The features include *Easy Key*, which provides instant keyboard access to the BIOS for adjustments to Clock and Default settings and *LogoGenie*, which allows you to create your own customized logo to be displayed during system boot up. The *BIOS Guardian* is an Anti Virus utility that prevents viruses from damaging your system BIOS and rendering your system inoperative.

Expansion is provided by 1 AGP(2X/4X), and 6 PCI slots. In addition, the 1stMainboard AN11 is equipped with 2 dual channeled enhanced PCI bus master IDE connectors, plus two optional IDE RAID connectors for supporting more efficient data backup. Standard I/O connections include 2 serial ports, 1 parallel port, 1 PS/2 mouse and keyboard connector, 4 USB connection ports, 1 IR port, and 1 media connector (Line-In, Line-Out, Mic-In, game port).

## Package Checklist

If you discover any item below was damaged or lost, please contact your vendor.

- ☒ The mainboard      ☒ This user manual
- ☒ One FDD cable      ☒ One HDD cable
- ☒ One ATA/100 cable      ☒ Two software CDs (CD Pro, CD Plus)
- ☒ One USB dual cable

### IMPORTANT: AMD CPU HEAT SINK INSTALLATION



*Be ware finish heat sink install. Before you boot system, please check the heat sink is complete contact with die of CPU.*

The poor contact will bring about over heat, it may damage your processor.


It is strongly recommended that at least a 250-watt ATX power pupply be used for this motherboard. Make sure that your ATX power supply can supply at least 20 amperes on teh +5-Volt lead and 10mA on the +5-Volt standby lead (+5VSB). Your system may become unstable / unreliable and may experience difficulty in powering up if your power supply is inadequate.



**NOTE: CD Pro** that contains patch files, onboard video/audio chip drivers, related online help and other useful information can be found in your mainboard package.

*Please install it right after your Windows operating system installation is done.* Place your CDPro in the drive, an operating menu will appears in your monitor. Please select *Auto Installation*. It will automatically detect which software tools (patch files, drivers) that the mainboard needs. Press **OK** button to go through the whole installation procedure in a very straight forward and easy way. It also provides you with a custom way to select wanted patch files and software drivers that for onboard chips use. **The top menu of the CD Pro lists all the functions that allowed by this board.**

## The AN11 Mainboard

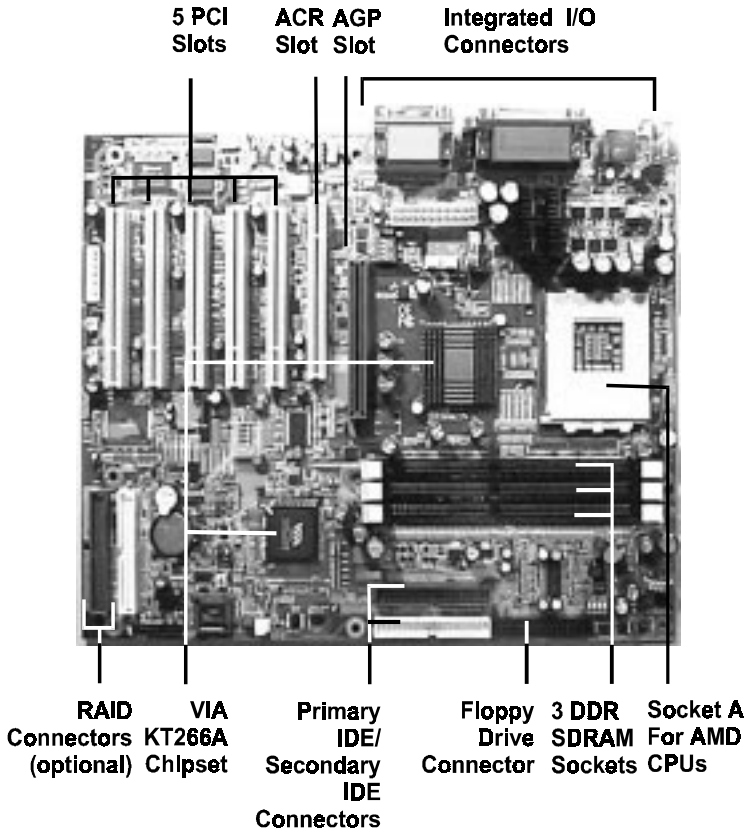

## Main Features

### ■ Easy Installation

BIOS with support for Plug and Play, auto detection of IDE hard drives, LS-120 drives, IDE ZIP drives, Windows 98SE, Windows ME, Windows NT, Windows 2000, Windows XP, and OS/2.

### ■ Leading Edge Chipset

VIA VT8366A is a single-chip North Bridge for Socket A based Athlon CPUs with 200/266 MHz Front Side Bus with AGP 4X and PCI plus advanced memory controller that supports PC1600/PC2100 DDR SDRAM. VIA VT8233 is a highly Vlink client highly integrated controller that supports PC99-compliant system. The VT8233 also supports ATA 100 standard.

### ■ Versatile Main Memory Support

Accepts up to 3 GB DRAM using three DDR DIMMs from 256 MB to 3 GB with support for lightening-fast (PC1600/PC2100) DDR SDRAM .

### ■ AMD Processors Support

Athlon Socket 462 CPU: 800 MHz to 1.4 GHz and up\*at 200 MHz FSB/  
1.0 to 1.4 GHz at 266 MHz FSB;

Duron Socket 462: 800 to 950 MHz at 200 MHz FSB.

Athlon XP: 1.5 to 1.9 GHz and up\*

Morgen 1 to 1.2 GHz and up\*

(\*: not tested yet)

### ■ Enhanced PCI Bus Master IDE Controller with Ultra DMA 33/66/100 Support

Integrated Enhanced PCI Bus Master IDE controller features two dual-channel connectors that up to four Enhanced IDE devices, including CD-ROM and Tape Backup Drives, as well as Hard Disk Drives supporting the new Ultra DMA 100 protocol. Standard PIO Mode 3, PIO Mode 4, DMA Mode 2, DMA Mode 4, UltraDMA-100 Mode 5 devices are also supported.

- **Optional IDE RAID Level 0/1 Support**  
The optional feature allows this board to back up huge amount data in a more efficient way.
- **AGP, ACR, and PCI Expansion Slots**  
One AGP Bus and one ACR (Advanced Communication Riser) expansion slot and five PCI Bus expansion slots provided the room to install a full range of add-on cards.
- **Compact Onboard Audio Subsystem**  
Embedded in VIA VT8233, an integrated high bandwidth Vlink client controller, direct sound AC97 audio subsystem. UltraDMA-66/100 master mode EIDE controller, six USB controller, ACPI enhanced power management, and PC99 compliant.
- **Super Multi Input/Output (I/O) Support**  
Integrated Plug and Play multi-I/O chipset features two high-speed UART 16550 compatible serial ports, one EPP/ECP capable parallel port, one IR port, one game port, and one FDD connector.
- **Convenient Rear Panel USB Connection Support**  
Two USB ports integrated in the rear I/O panel and two extra USB ports for either front or rear panel connection allow convenient and high-speed Plug and Play connections to the growing number of USB compliant peripheral devices on the market.
- **Onboard Accelerated Graphics Port (AGP)**  
The motherboard is installed one 32-bit **1.5V** AGP 2X/4X bus with a dedicated 66MHz/133MHz path from the graphics card to the system memory offering much greater bandwidth than the 32-bit PCI bus does. AGP enabled 3D graphics cards can directly access main memory across this fast path instead of using local memory.

## FIC Unique Innovation for Users (NOVUS) - Enhanced Mainboard Features and System Support

### ■ LogoGenie

A user friendly GUI supporting Windows 95/98/98SE (not Windows 2000/NT/ME), LogoGenie allows you to customize, create or select a Logo which will be displayed when the system is booting.



#### **NOTE:**

1. LogoGenie supports Award BIOS only.
2. If you create a Logo file (.bmp) by LogoGenie, the file size must be 640 x 464 x 256 colors.

To enable this utility, please proceed as follows:

1. Insert CD Pro (version number). Select LogoGenie from the Menu and follow the installation instructions.
2. After LogoGenie has been installed, go to Windows Start Box. In Programs Menu, select LogoGenie 2.0, then select LogoGenie.
3. Press F1 to read Help file to understand how to use this software if it is new to you.

### ■ BIOS Guardian

BIOS Guardian by default is enabled. It must be disabled in order to reflash BIOS, thus effectively acts as a fire-wall against viruses that can attack the BIOS while the system is running.



**WARNING:** While excute Step3 below, please do not turn off the systsem power in order to avoid BIOS damage.

BIOS Guardian can be disabled as follows:

1. Go to BIOS Set Up Menu. (Press **Del** key while booting.)
2. Go to Advanced BIOS Features Set Up Submenu.
3. Disable BIOS Guardian.
4. Save the setting, and restart system.



**NOTE:** However, if it is disabled and while boot the system, the POST screen will be held and shows you the message to let you know the current status of BIOS Guardian. To press **G** key will enable the BIOS Guardian again; or simply to press the **space bar** will continue the booting process.

### ■ Easy Key

Instead of completing the multi-layered BIOS setup process these 3 Easy Key functions provide direct access to Sub-Menu's when completing BIOS settings adjustments.

Easy-Keys are as follows:

- Ctrl + c:** To enter clock settings menu.
- Ctrl + p:** To load Performance Default settings and restart.
- Ctrl + f:** To load Fail-Safe Default settings and restart.

### ■ Overclock Partner

Should the system not start because clock speed settings have been increased to a speed incompatible with the system, the Overclock Partner allows you to reboot at system default settings, protecting hardware from any damages.

Complete the following steps:

1. Turn the system off.
2. Restart while holding down the **Insert** key. It is important that the **Insert** key is held down until the default clock speed is shown on the POST screen.
3. Enter BIOS settings menu, and re-set clock speed desired or default.

**This Page Left Blank for Note**

# Installation Procedures

The mainboard has several user-adjustable jumpers on the board that allow you to configure your system to suit your requirements. This chapter contains information on the various jumper settings on your mainboard.

To set up your computer, you must complete the following steps:

- Step 1 - Set system jumpers/switches
- Step 2 - Install memory modules
- Step 3 - Install the Central Processing Unit (CPU)
- Step 4 - Install expansion cards
- Step 5 - Connect ribbon cables, cabinet wires, and power supply
- Step 6 - Set up BIOS software
- Step 7 - Install supporting software tools



**WARNING:** Excessive torque may damage the mainboard. When using an electric screwdriver on the mainboard, make sure that the torque is set to the allowable range of 5.0 ~ 8.0kg/cm.

Mainboard components contain very delicate Integrated Circuit (IC) chips. To prevent static electricity from harming any of the mainboard sensitive components, you should follow the following precautions whenever working on the computer:

1. Unplug the computer when working on the inside.
2. Hold components by the edges and try not to touch the IC chips, leads, or circuitry.
3. Wear an anti-static wrist strap which fits around the wrist.
4. Place components on a grounded anti-static pad or on the bag that came with the component whenever the components are separated from the system.



1). **Clear CMOS, FSB Speed Select, Auto Detect CPU Core Voltage**

**CLR\_CMOS**  
*(Clear CMOS)*



*Clear CMOS*



*Normal  
(Default)*

**FS**  
*(FSB Speed Select)*



*133MHz*



*100MHz  
(Default)*

**JP1\_4G**  
*(for Future Ratio-Unlocked CPU Use)*



*Disable*



*Enable  
(for AMD CPU  
1.4GHz or above  
and ratio-unlocked)*

**Optional RAID\_JP**




*ATA100  
(Default)*




*RAID 0/1 Enable*

 **ADV**  
**(CPU Core Voltage Setting)**



 **ADV\_EN**  
**(Auto Detect CPU Core Voltage)**




| CPU Voltage | ADV-1 | ADV-2 | ADV-3 | ADV-4 |
|-------------|-------|-------|-------|-------|
| 1.475 V     | OFF   | OFF   | OFF   | OFF   |
| 1.500 V     | ON    | OFF   | OFF   | OFF   |
| 1.725 V     | OFF   | ON    | OFF   | ON    |
| 1.750 V     | ON    | ON    | OFF   | ON    |
| 1.775 V     | OFF   | OFF   | ON    | ON    |
| 1.800 V     | ON    | OFF   | ON    | ON    |
| 1.825 V     | OFF   | ON    | ON    | ON    |
| 1.850 V     | ON    | ON    | ON    | ON    |



**NOTE:** Please set the jumper ADV\_EN at Disable before you adjust the switch ADV.

**2). Front Panel Block Cable Connection**

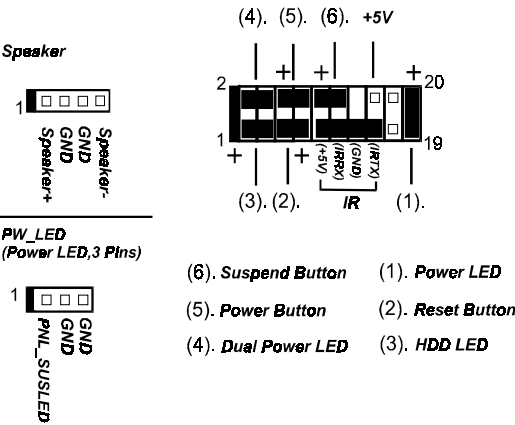

### 3). CPU Fan Installation

This connector is linked to the CPU fan. Without sufficient air circulation, the CPU may overheat resulting in damage to both the CPU and the mainboard.

***Damage may occur to the mainboard and/or the CPU fan if these pins are used incorrectly. These are not jumpers, do not place jumper caps over these pins.***

## 1). Set System Jumpers/Switches



**NOTE:** Users are not encouraged to change the jumper settings not listed in this manual. Changing the jumper settings improperly may adversely affect system performance.

### ***Clear CMOS: CLR\_CMOS***


The CMOS RAM is powered by the onboard button cell battery. To clear the RTC data: (1) Turn off your computer. (2) Place the jumper cap onto the pinpair 1-2 to clear CMOS. (3) Turn on your computer until *CMOS checksum error* appears. (4) Turn off your computer. (5) Take off the jumper cap to disable it. (6) Turn on your computer. (7) Hold down the **Delete** key when boots. (8) Enter the BIOS Setup to re-enter user preferences.



**Clear CMOS**



**Normal  
(Default)**

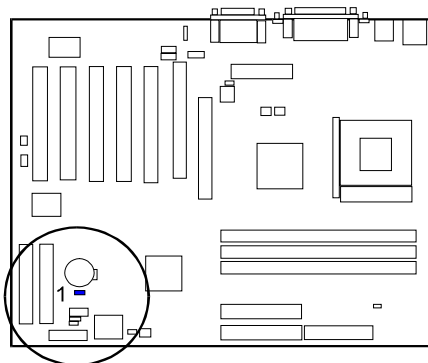

## ***FSB Speed Select: FS***


The jumper allows users to select the front side bus speed.



**133MHz**



**100MHz  
(Default)**

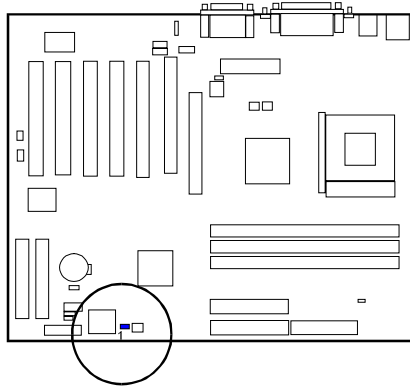

## ***None Over Clock Enable: JP1\_4G***

The jumper allows you to stop the over ratio clock function if you install an AMD CPU that is ratio-unlocked and over 1.4GHz (1.4GHz included).


Once this jumper set at ON, the functions of ADV will not work.



**Disable**



**Enable  
(for AMD CPU  
1.4GHz or above  
and ratio-unlocked)**



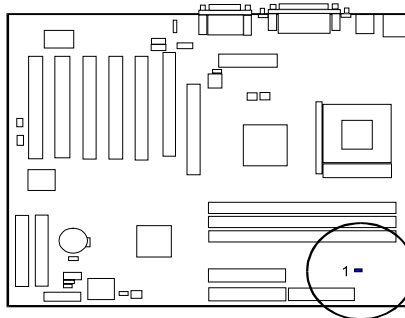


### ***Auto Detect CPU Core Voltage: ADV\_EN***

The 3-pin jumper allows you to start the over voltage driving capability of this mainboard by disabling this jumper and set the switch ADV according to the table below to approach the best performance.



  **WARNING:** Voltage and frequency above CPU original specifications are not guaranteed to be stable.

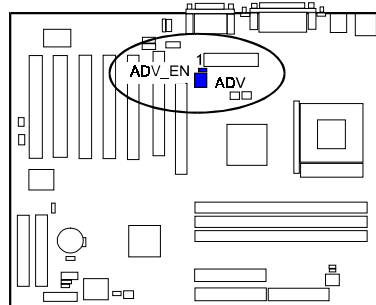

### ***CPU Core Voltage Setting: ADV***

The switch allows you to set the CPU core voltage to approach the best performance according to the table below after you set the jumper ADV at Disable.

| <b><i>CPU Voltage</i></b> | <b><i>ADV-1</i></b> | <b><i>ADV-2</i></b> | <b><i>ADV-3</i></b> | <b><i>ADV-4</i></b> |
|---------------------------|---------------------|---------------------|---------------------|---------------------|
| 1.475 V                   | OFF                 | OFF                 | OFF                 | OFF                 |
| 1.500 V                   | ON                  | OFF                 | OFF                 | OFF                 |
| 1.725 V                   | OFF                 | ON                  | OFF                 | ON                  |
| 1.750 V                   | ON                  | ON                  | OFF                 | ON                  |
| 1.775 V                   | OFF                 | OFF                 | ON                  | ON                  |
| 1.800 V                   | ON                  | OFF                 | ON                  | ON                  |
| 1.825 V                   | OFF                 | ON                  | ON                  | ON                  |
| 1.850 V                   | ON                  | ON                  | ON                  | ON                  |

### ***Optional RAID Function Enable: RAID\_JP***


The 3-pin jumper allows you to enable optional RAID features.



**ATA100  
(Default)**




**RAID 0/1 Enable**

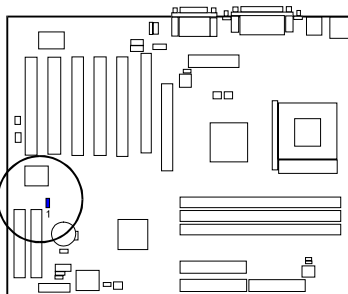

## **2). Install Memory Modules**


1. Locate the DIMM slots on the mainboard.
2. Install the DIMM straight down into the DIMM slot using both hands.
3. The clip on both ends of the DIMM slot will close up to hold the DIMM in place when the DIMM reaches the slot bottom.

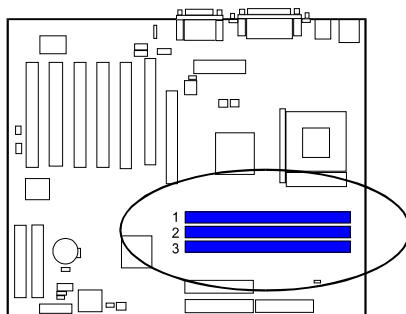

Press the clips with both hands to remove the DIMM.

### 3). Install the CPU

The AMD Athlon/Duron CPU module resides in the Socket A socket on the board. Please follow the steps introduced below to complete the CPU installation.

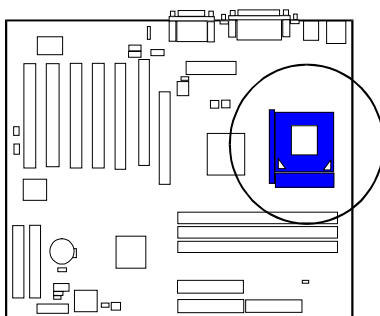**CAUTION:**


1. The heat sink and fan you installed must be approved by AMD.
2. The mainboard must be placed on a solid place to avoid shaking while install the heat sink and fan on the board.
3. The heat sink must be contact with the CPU top properly.
4. Never run the processor without the heat sink properly and firmly attached. **PERMANENT DAMAGE WILL RESULT!**

To install the CPU, do the following:

1. Lift the lever on the side of the CPU socket.
2. Handle the chip by its edges and try not to touch any of the pins.
3. Place the CPU in the socket. The chip has two notches to correctly locate the chip. Align two notches of the processor with the two triangular marks on the socket. Do not force the chip. The CPU should slide easily into the socket.
4. Swing the lever to the down position to lock the CPU in place.
5. Install the cooling fan with heat sink on top of the installed CPU.
6. Place the mainboard (with the CPU, its cooling fan, and heat sink) into the system chassis and affix it with screws.

## 4). Install Expansion Cards

This section describes how to connect an expansion card to one of your system expansion slots. Expansion cards are printed circuit boards that, when connected to the mainboard, increase the capabilities of your system. For example, expansion cards can provide video and sound capabilities. The mainboard features one AGP, one ACR, and five PCI bus expansion slots.

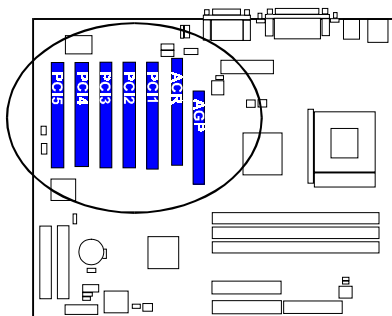

**CAUTION:** Make sure to unplug the power supply when adding or removing expansion cards or other system components. Failure to do so may cause severe damage to both the mainboard and expansioncards.

Always observe static electricity precautions.

Please read **Handling Precautions** at the start of this manual.

To install an expansion card, follow the steps below:


1. Remove the computer chassis cover and select an empty expansion slot.
2. Remove the corresponding slot cover from the computer chassis. Unscrew the mounting screw that secures the slot cover and pull the slot cover out from the computer chassis. Keep the slot cover mounting screw nearby.

3. Holding the edge of the peripheral card, carefully align the edge connector with the expansion slot.
4. Push the card firmly into the slot. Push down on one end of the expansion card, then the other. Use this rocking motion until the add-on card is firmly seated inside the expansion slot.
5. Secure the board with the mounting screw removed in Step 2. Make sure that the card has been placed evenly and completely into the expansion slot.
6. Replace the computer system cover.
7. Setup the BIOS if necessary.
8. Install the necessary software drivers for the expansion card.


## 5). Connect Devices

### *Floppy Diskette Drive Connector*


This connector provides the connection with your floppy disk drive. The red stripe of the ribbon cable must be the same side with the Pin 1.

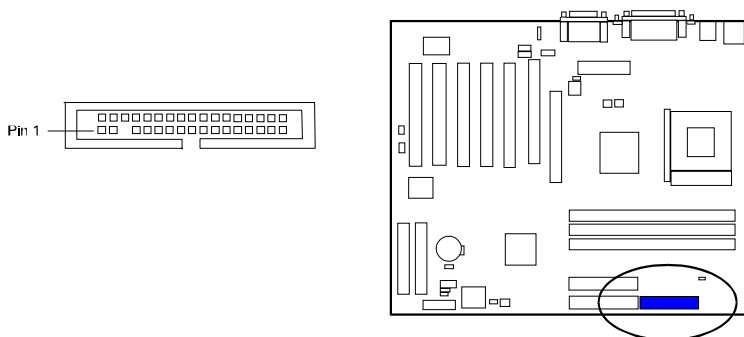

The two connectors, IDE1 and IDE2, are used for your IDE hard disk drives, CD drives, LS-120 drives, or IDE ZIP drives. The red stripe of the ribbon cable must be the same side with the Pin 1. The two connectors, IDE3 and IDE4, are optional. They are linked with your RAID devices (level 0 and 1).


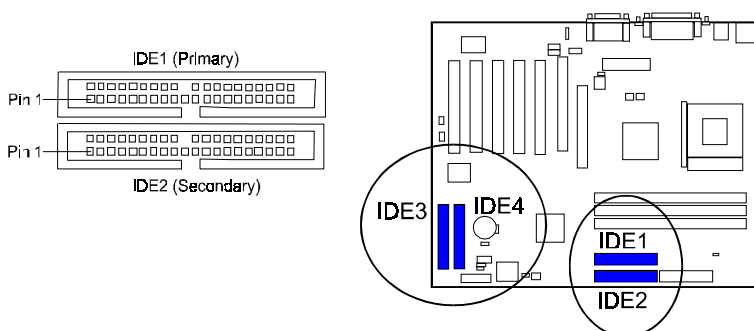


This 20-pin male block connector is connected to the ATX power supply. The plug from the power supply will only insert in one orientation because of the different hole sizes. Find the proper orientation and push down firmly making sure that the pins are aligned.

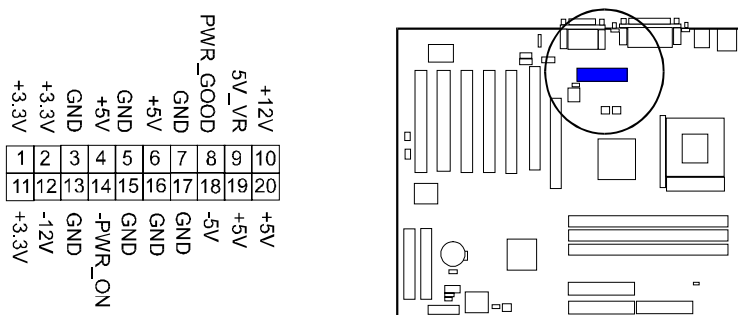



## Fan Connectors

The connector, CPU\_FAN, is linked to the CPU fan to lower the CPU temperature. The SYS\_FAN1 connector can be used by North Bridge cooling fan. The SYS\_FAN2 connector allows you to link with the cooling fan on the system case to lower the system temperature.

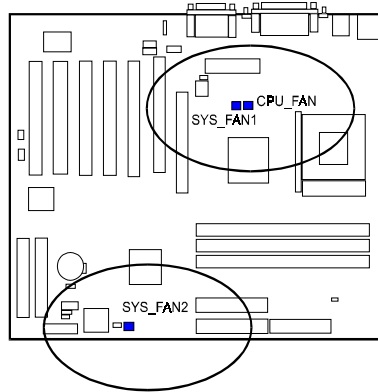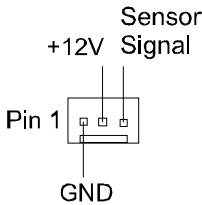



## Wake-On-Ring Connector

 The 2-pin connector allows you to link with your modem card which outputs a WOR signal; the system can be turned on from the power-off status by a remote phone call via the modem card.

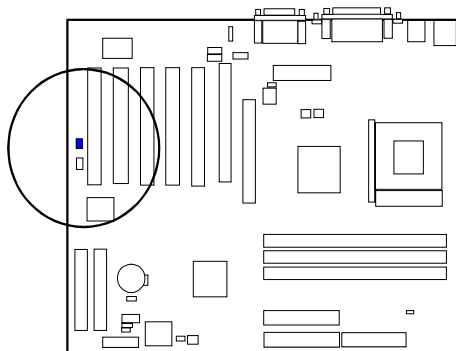


### *Wake-On-Lan Connector*

 This 3-pin connector allows the remove servers to manage the system that installed this mainboard via your network adapter which also supports WOL.

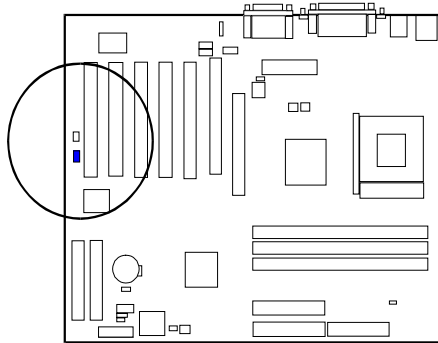



### *Blue Tooth Audio Port Connector*

The 4-pin connector is used as an audio port for your attached blue tooth device.

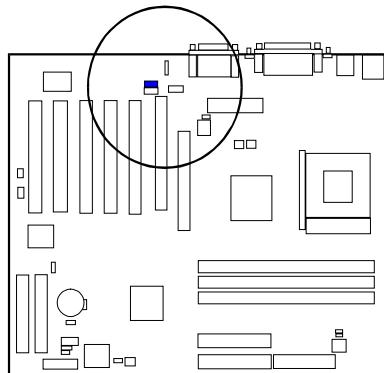



## CD Audio-In Connectors


The CD\_IN2 connector is used as a port for CD drive audio input. The AUX\_IN1 provided users with one extra CD drive audio input port. Both connectors are of 2.0 mm; however, if 2.54 mm connector is interested, please ask your mainboard supplier for details.

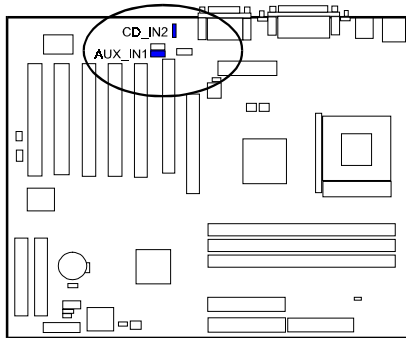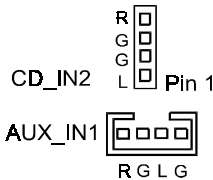

## Front Panel Block, Power LED and Speaker Connector

This block connector includes the connectors for linking with HDD LED, power LED (2 and 3 pins), dual power LED, power button, suspend button, reset button, and IR on the front panel of the system case. Please identify polarities of plug wires for the case speaker and LEDs. Please ask vendor about this information when you buy them and install the system by yourself. The plug wires polarities of these buttons will not affect the function.

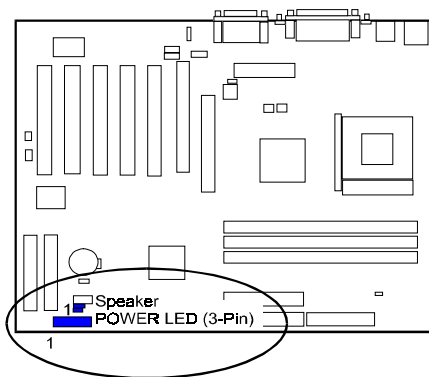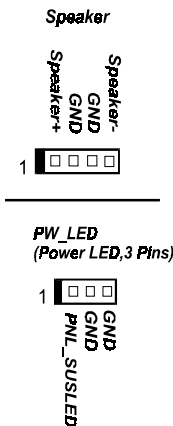

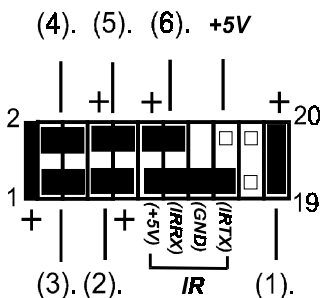

**NOTE:** When a dual power LED is used, Pin 2 is for green one and Pin 4 is for yellow one. If single power LED installed, Pin 2 is for positive and Pin 4 is for negative.

**1. Power LED (2-Pin)** is connected with the system power indicator to indicate whether the system is on/off. It will blink when the system enters suspend mode. There is a 3-Pin Power LED connector on board for some cases that with a 3-pin plug.

**2. Reset Button** is connected to the reset button. Push this switch to reboot the system instead of turning the power button off and on.

**3. HDD LED** is connected to the IDE device indicator. This LED will blink when the hard disk drives are activated.

**4. Dual Power LED** it is in green light when the system in power on status. It is in yellow light when the system in suspend mode.


**5. Power Button** is connected with power button. Push this switch allows the system to be turned on and off rather than using the power supply button.

**6. Suspend Button** is connected with suspend button. To enter the system into power saving mode, simply press this button when the system is in full-on mode.

**Speaker** is connected with the case speaker.


*PS/2 Keyboard and Mouse Connector*

These two 6-pin female (PS/2 keyboard is purple color and PS/2 mouse is green color) connectors are used for your PS/2 keyboard and PS/2 mouse.

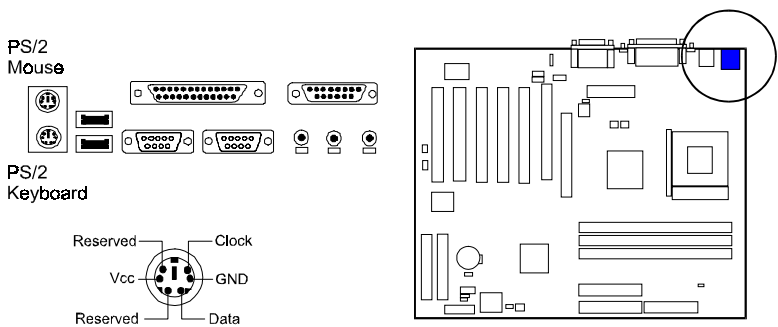


*Universal Serial Bus Connectors*

These two black connectors integrated on the edge of the board are used for linking with USB peripheral devices. This board also provides a connector USB2 for linking with the two extra USB connections. They can link with front panels of some system cases.

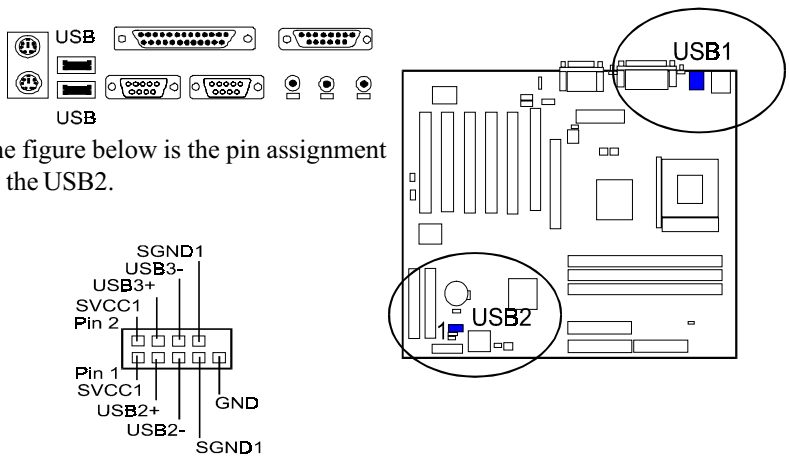


*Printer Connector*

This 25-pin D-Sub female burgundy-colored connector is attached to your printer.

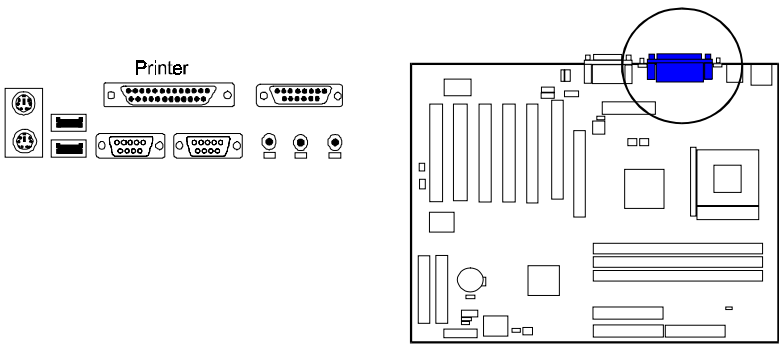


*Serial Port Connectors*

COM1 (9-pin D-sub male connector with teal color) and COM2 (9-pin D-sub teal male connector with teal color) allow you to connect with your devices that use serial ports, such as a serial mouse or an external modem.

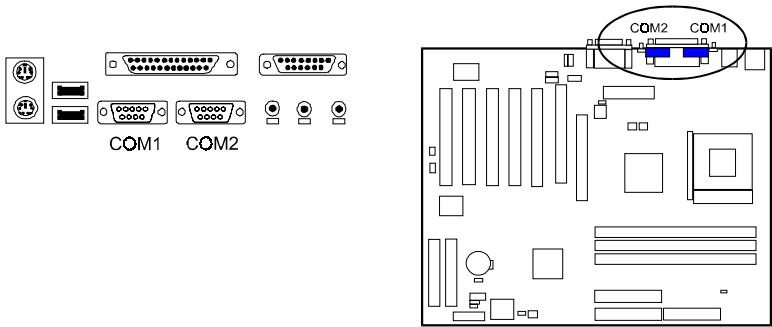


## Audio I/O Jacks

LINE\_OUT (lime) can be connected to headphones or preferably powered speakers. LINE\_IN (light blue) allows tape players or other audio sources to be recorded by your computer or played through the LINE\_OUT. MIC\_IN (pink) allows microphones to be connected for voice input. The mainboard also provides you with a front panel audio port connector, FNT\_AUDIO, when needed. Its pin definitions were presented below.

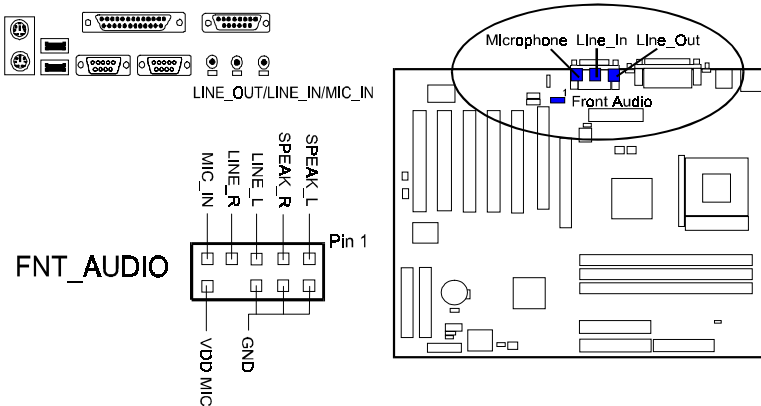

## Game/MIDI Connector

This 15-pin female gold-colored connector allows you to connect game joysticks or game pads. Connect MIDI devices for playing or editing audio.

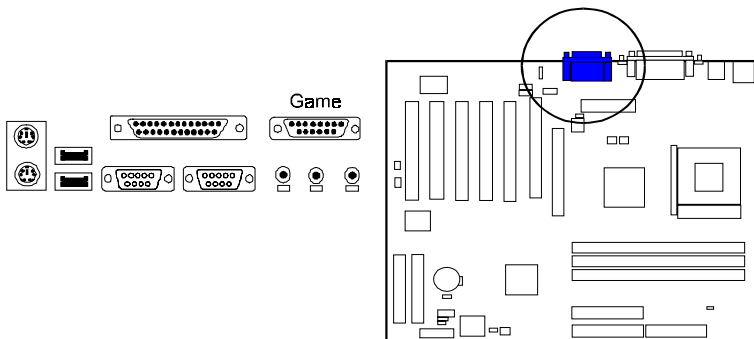


**This Page Left Blank for Note**

# BIOS Setup

The mainboard comes with the chip that Award BIOS that contains the ROM Setup information of your system. (This chip serves as an interface between the processor and the rest of the mainboard components.) This section explains the information contained in the Setup program and tells you how to modify the settings according to your system configuration.

## CMOS Setup Utility

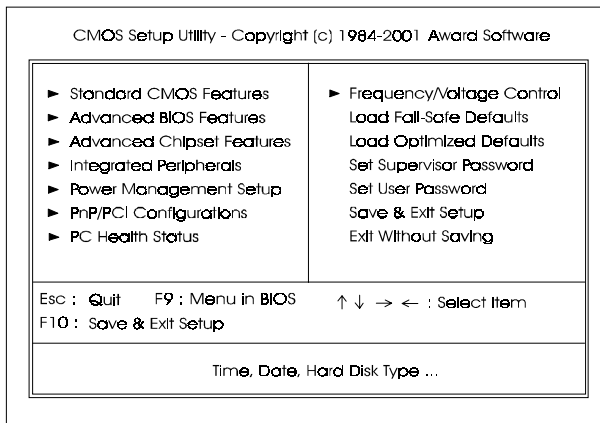

A Setup program, built into the system BIOS, the settings are stored in the CMOS. This Setup utility program allows updates to the mainboard configuration settings. It is executed when the user changes system configuration; user changes system backup battery; or the system detects a configuration error and asks the user to run the Setup program. Use the arrow keys to select and press **Enter** to run the selected program.

## Standard CMOS Setup

| CMOS Setup Utility - Copyright (c) 1984-2001 Award Software  |                     |  |
|--|---------------------|--|
| Standard CMOS Features   |                     |  |
| Date (mm/dd/yy)  | Fri., Oct. 19, 2001 | Item Help  |
| Time (hh:mm:ss)  | 18 : 3 : 57         |  |
| ▶ IDE Primary Master<br>▶ IDE Primary Slave<br>▶ IDE Secondary Master<br>▶ IDE Secondary Slave   |                     | Menu Level ▶<br><br>Change the day, month,<br>year and century |
| Drive A  | [1.44M, 3.5 In.]    |  |
| Drive B  | [None]              |  |
| Floppy 3 Mode Support  | [Disabled]          |  |
| Video  | [EGA/VGA]           |  |
| Halt On  | [All Errors]        |  |
| Base Memory  | 640K                |  |
| Extended Memory  | 48128K              |  |
| Total Memory   | 49152K              |  |
| ↑↓→ Move   Enter : Select   +/-/PU/PD: Value   F10 : Save   ESC : Exit   F1 : General Help<br>F5 : Previous Values   F6 : Fail-Safe Defaults   F7 : Optimized Defaults |                     |  |

The Standard CMOS Setup screen is displayed above. Each item may have one or more option settings. The system BIOS automatically detects memory size, thus no changes are necessary. Use the arrow keys to highlight the item and then use **Page Up/Page Down** keys to select the value you want in each item.

### Date

To set the date, highlight the *Date* field and then press **Page Up/Page Down** keys to set the current date. Follow the month, day and year format.

### Time

To set the time, highlight the *Time* field and then press **Page Up/Page Down** keys to set the current time. Follow the hour, minute, and second format.

Hard Disks

This field records the specifications for all non-SCSI hard drives installed in the system. The onboard PCI IDE connectors provide Primary and Secondary channels for connecting up to four IDE hard disks or other IDE devices. Each channel can support up to two hard disks, the first of which is the *Master* and the second is the *Slave*.

Hard Disk Configurations

- Capacity:** The hard disk size. The unit is Bytes.
- Cylinder:** The cylinder number of the hard disk.
- Head:** The read/write head number of hard disk.
- Precomp:** The cylinder number at which the disk drive changes the write current.
- Landing Zone:** The cylinder number that the disk drive heads (read/write) are seated when the disk drive is parked.
- Sector:** The sector number of each track defined on the hard disk.

Chapter 3  
BIOS Setup

Drive A / Drive B

This field records the types of floppy drives installed in the system. To enter the configuration value for a particular drive, highlight its corresponding field and then select the drive type using the **Page Up** or **Page Down** key.

Floppy 3 Mode Support

This is a Japanese standard floppy type drive. The standard stores 1.2MB in a 3.5 inch diskette.


Video

Set this field to the type of video display card installed in the system.

Halt On

This field determines which types of errors will cause the system to halt.

## Advanced BIOS Features

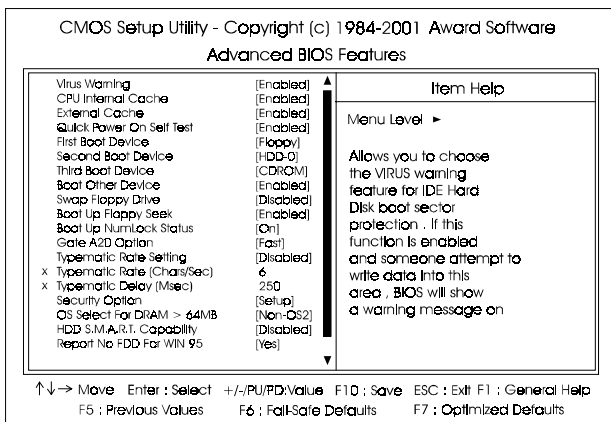

### Virus Warning

This feature will prompt users a warning message, when any write boot sector command is executed. The options are: Enabled, Disabled.

### CPU Internal Cache

When enabled, improves the system performance. Disable this item when testing or trouble-shooting. The options are: Enabled, Disabled.

### External Cache

When enabled, supports CPU L2 cache. This feature allows you to disable the cache function when the system performance is unstable to run some software. The options are: Enabled, Disabled.

### Quick Power On Self Test

When enabled, allows the BIOS to bypass the extensive memory test. The options are: Enabled, Disabled.

### First/Second/Third Boot Device

This feature allows user to select the boot device priority. The options are: Floppy, LS120, HDD-0, SCSI, CDROM, HDD-1, HDD-2, HDD-3, ZIP100, USB-FDD, USB-ZIP, USB-CDROM, USB-HDD, LAN, Disabled.

### Boot Other Device

This feature allows user to select the boot device priority.  
The options are: Enabled, Disabled.

### Swap Floppy Drive

Allows you to switch the order in which the operating system accesses the floppy drives.  
The options are: Enabled, Disabled.

### Boot Up Floppy Seek

When enabled, assigns the BIOS to perform floppy diskette drive tests by issuing the time-consuming seek commands.  
The options are: Enabled, Disabled.

### Boot Up Numlock Status

When set to On, allows the BIOS to automatically enable the Num Lock Function when the system boots up. The options are: On, Off.

### Gate A20 Option

When set at Fast, allows a faster access response of address Line No. 20.  
The options are: Fast, Normal.

### Typematic Rate Setting

The term typematic means that when a keyboard key is held down, the character is repeatedly entered until the key is released.  
The options are: Disabled, Enabled.

### Typematic Rate (Chars/Sec)

This feature is available only if the above item, Typematic Rate Setting, is set at Enabled. Sets the rate of a character repeat when the key is held down. The options are: 6, 8, 10, 12, 15, 20, 24, 30.

### Typematic Delay (Msec)

This feature is available only if the item, Typematic Rate Setting, is set at Enabled. Sets the delay time before a character is repeated.  
The options are: 250, 500, 750, 1000 millisecond.

### Security Option

Allows you to set the security level of the system.

The options are: Setup, System.

### OS Select For DRAM > 64MB

If your operating system (OS) is OS/2, select the option OS2. Otherwise, stay with the default setting Non-OS2.

The options are: Non-OS2, OS2.

### HDD S.M.A.R.T. Capability

S.M.A.R.T. stands for Self-Monitoring and Analysis Reporting Technology which allows your hard disk drive to report any read/write errors and issues a warning with LDCM installed.

The options are: Disabled, Enabled.

### Report No FDD For WIN 95

When the field under the Standard CMOS Setup Menu for Drive A and/or Drive B is set at None, users must set this field is set at Yes for it to function properly. Otherwise, set at No, even if field for Drive A and/or Drive B is set at None, system will still detect and recognize of a floppy drive(s).

The options are: Yes, No.

### Video BIOS Shadow

Enabling this feature will copy the video BIOS to shadow RAM, it will improve the system performance.

The options are: Enabled, Disabled.


### BIOS Guardian

It allows the system to prevent computer viruses. Users will need to disable it to update BIOS. The options are: Enabled, Disabled.



**NOTE:** Please disable this BIOS feature about BIOS Guardian before you start to reflash BIOS.

## Advanced Chipset Features

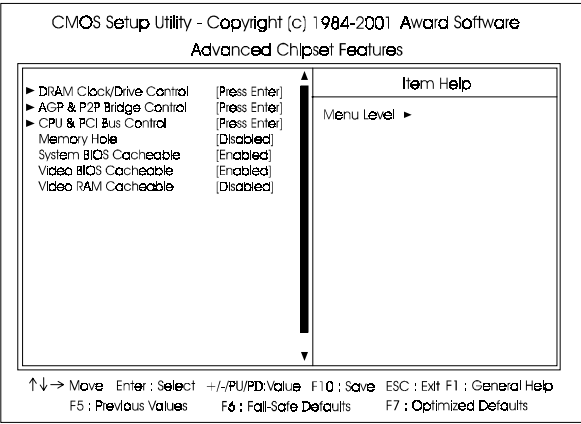

### DRAM Timing By SPD

#### Current FSB Frequency, Current DRAM Frequency

This item allows you to get current FSB and DRAM frequencies.

#### DRAM Clock

The feature allows users to select the DRAM clock.

The options are: 100 MHz, 133 MHz, By SPD, HCLK.

#### DRAM Timing

This feature allows user to select the way to set DRAM timing.

The options are: By SPD, Manual.

#### DRAM CAS Latency

If the CAS latency of your installed memory module is 2 Cycle, The selection 2 will enhance system performance. The options are: 2.5, 2.

#### Bank Interleave

This item allows users to select the bank interleave function of DRAM, when the feature DRAM Timing By SPD set at Disabled.

The options are: Disabled, 2 Bank, 4 Bank.

### Precharge to Active (Trp)

This item allows users to set the clock time from Precharge to Active command. The options are: 2T, 3T

### Active to Precharge (Tras)

This item allows users to set the clock time from Active to Precharge command. The options are: 5T, 6T

### Active to CMD (Trcd)

This item allows users to set the clock time from Active to Read/Write Delay command. The options are: 2T, 3T

### DRAM Queue Depth

This item allows users to set DRAM queue depth.  
The options are: 2 level, 4 level, 3 level.

### DRAM Command Rate

This item allows users to set Address Time After command.  
The options are: 2T Command, 1T Command.

### **AGP & P2P Bridge Control**

#### AGP Aperture Size

It allows you to select the main memory frame size for AGP use.  
The options are: 256M, 128M, 64M, 32M, 16M, 8M, 4M.

#### AGP Mode

This feature allows users to select the AGP mode when an AGP add-on card installed. The options are: 4X, 2X, 1X.

#### AGP Driving Control / AGP Driving Value

These two features allow user to improve the performance of AGP card manually by pressing Page Down/Page UP key if necessary.  
The options of AGP Driving Control are: Auto, Manual.

#### AGP Fast Write

This feature allows you to set AGP fast write mode.  
The options are: Disabled, Enabled.

### AGP Master 1 WS Write

When enabled, the AGP bus master write access to DRAMs will add one wait-state cycle. The options are: Enabled, Disabled.

### AGP Master 1 WS Read

When enabled, the AGP bus master read access to the DRAMs will add one wait-state cycle. The options are: Disabled, Enabled.

## ***CPU & PCI Bus Control***

### PCI1/2 Master 0 WS Write

When enabled, allows a zero-wait-state-cycle delay when the PCI1/2 master drive writes data to DRAM. The options are: Enabled, Disabled.

### PCI1/2 Post Write

When enabled, allows the CPU to PCI1/2 master drive excutes post write. The options are: Enabled, Disabled.

### PCI Delay Transaction

Enable this feature to abort the current CPI master cycle and to accept the new PCI master request, it reaccepts the original PCI master and returns the PCI data phase to the original PCI master.

The options are: Disabled, Enabled.

### Memory Hole

When you install a Legacy ISA card, this feature allows you to select the memory hole address range of the ISA cycle when the processor accesses the selected address area. Please read your card manual for detail information. When disabled, the memory hole at the (15-16MB) address will be treated as a DRAM cycle when the processor accesses the 15~16MB address area. The options are: 15M - 16M, Disabled.

System BIOS Cacheable

When enabled, allows the ROM area F000H-FFFFH to be cacheable when cache controller is activated. The options are: Enabled, Disabled.


Video BIOS Cacheable

As with caching the system BIOS above, enabling the video BIOS cache will cause access to the video BIOS addressed at C0000H-C7FFFH to be cached, if the cache controller is also enabled.  
The options are Enabled, Disabled.

Video RAM Cacheable

When enabled, allows the video RAM area to be cacheable.  
The options are: Enabled, Disabled.

Integrated Peripherals

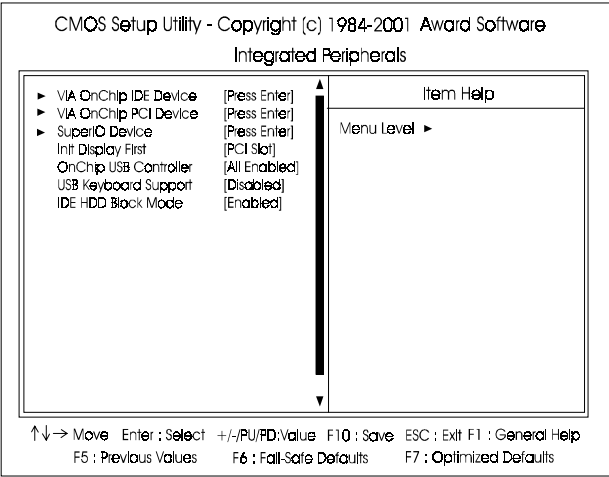

---

### ***VIA OnChip IDE Device***

#### **OnChip IDE Channel0**

When enabled, allows you to use the onboard primary PCI IDE. If a hard disk controller card is used, set at Disabled.

The options are: Enabled, Disabled.

#### **OnChip IDE Channel1**

When enabled, allows you to use the onboard secondary PCI IDE. If a hard disk controller card is used, set at Disabled.

The options are: Enabled, Disabled.

#### **IDE Prefetch Mode**

When set at Enabled, it allows data to be posted to and prefetched from the primary IDE data ports. Data prefetching is initiated when a data port read occurs. The read prefetch eliminates latency to the IDE data ports and allows them to be performed back to back for the highest possible PIO data transfer rates. The first data port read of a sector is called the demand read. Subsequent data port reads from the sector are called prefetch reads. The demand read and all prefetch reads must be of the same size (16 or 32 bits). The options are: Enabled, Disabled.

#### **Primary Master PIO**

Allows an automatic or a manual configuration of the PCI primary IDE hard disk (master) mode. The options are: Auto, Mode 0, Mode 1, Mode 2, Mode 3, Mode 4.

#### **Primary Slave PIO**

Allows an automatic or a manual configuration of the PCI primary IDE hard disk (slave) mode. The options are: Auto, Mode 0, Mode 1, Mode 2, Mode 3, Mode 4.

#### **Secondary Master PIO**

Allows an automatic or a manual configuration of the PCI secondary IDE hard disk (master) mode. The options are: Auto, Mode 0, Mode 1, Mode 2, Mode 3, Mode 4.

### Secondary Slave PIO

Allows an automatic or a manual configuration of the PCI secondary IDE hard disk (slave) mode. The options are: Auto, Mode 0, Mode 1, Mode 2, Mode 3, Mode 4.

### Primary Master UDMA

Allows you to select the first PCI IDE channel of the first master hard disk mode or to detect it by the BIOS if the hard disk supports UDMA (Ultra DMA, faster than DMA). The options are: Auto, Disabled.

### Primary Slave UDMA

Allows you to select the first PCI IDE channel of the first slave hard disk mode or to detect it by the BIOS if the hard disk supports UDMA (Ultra DMA, faster than DMA). The options are: Auto, Disabled.

### Secondary Master UDMA

Allows you to select the second PCI IDE channel of the secondary master hard disk mode or to detect it by the BIOS if the hard disk supports UDMA (Ultra DMA, faster than DMA). The options are: Auto, Disabled.

### Secondary Slave UDMA

Allows you to select the second PCI IDE channel of the secondary slave hard disk mode or to detect it by the BIOS if the hard disk supports UDMA (Ultra DMA, faster than DMA). The options are: Auto, Disabled.

### *VIA OnChip PCI Device*

#### VIA-3058 AC97 Audio

It allows users to disable AC97 link in VT8233 South Bridge.  
The options are: Auto, Disabled.

#### VIA-3068 MC97 Modem

It allows users to disable MC97 link in VT8233 South Bridge.  
The options are: Auto, Disabled.

#### ACR LAN Card

It allows users to disable ACR LAN interface.  
The options are: Auto, Disabled.

### OnChip LAN Boot Rom

It allows users to decide whether to invoke the boot ROM of the onboard LAN chip. The options are: Enabled, Disabled.

### *SuperIO PCI Device*

#### Onboard FDC Controller

When enabled, the floppy diskette drive (FDD) controller is activated. The options are: Enabled, Disabled.

#### Onboard Serial Port 1

If the serial port 1 uses the onboard I/O controller, you can modify your serial port parameters. If an I/O card needs to be installed, COM3 and COM4 may be needed. The options are: 3F8/IRQ4, 3E8/IRQ4, 2F8/IRQ3, 2E8/IRQ3, Disabled.

#### Onboard Serial Port 2

If the serial port 2 uses the onboard I/O controller, you can modify your serial port parameters. If an I/O card needs to be installed, COM3 and COM4 may be needed. The options are: 2F8/IRQ3, 3E8/IRQ4, 2E8/IRQ3, 3F8/IRQ4, Disabled.

#### UART Mode Select

Allows you to select the IR modes if the serial port 2 is used as an IR port. Set at Standard, if you use COM2 as the serial port as the serial port, instead as an IR port. The options are: IrDA, ASKIR, Normal.

#### RxD , TxD Active

This feature is available only if the item, UART 2 Mode, is set at ASKIR or HPSIR. The feature allows you to select the active signals of the reception end and the transmission end. This is for technician use only.

The options are: Hi, Lo; Hi, Hi; Lo, Hi; Lo, Lo.

#### IR Transmission Delay

When Enabled, the transmission delays 4 characters-time (40 bit-time) if SIR is changed from RX mode to TX mode. When Disabled, no transmission delay if SIR is changed from RX mode to TX mode.

The options are: Enabled, Disabled.

### UR2 Duplex Mode

Allows you to select the IR modes.

The options are: Half, Full.

### Use IR Pins

Allows you to select IR pin mode.

The options are: Rx2, Tx2; IR-Rx2Tx2.

### Onboard Parallel Port

Allows you to select from a given set of parameters if the parallel port uses the onboard I/O controller.

The options are: Disabled, 378/IRQ7, 278/IRQ5, 3BC/IRQ7.

### Parallel Port Mode

Allows you to connect with an advanced printer via the port mode it supports. The options are: SPP, EPP, ECP, ECP+EPP, Normal.

### EPP Mode Select

This feature allows you to select the EPP type version.

The options are: EPP1.9, EPP1.7.

### ECP Mode Use DMA

This feature allows you to select Direct Memory Access (DMA) channel if the ECP mode selected. The options are: 1, 3.

### Game Port Address

This feature allows you to select the game port address or disable it.

The options are: Disabled, 201, 209.

### Midi Port Address

This feature allows you to select the Midi port address or disable it.

The options are: Disabled, 330, 300, 290.

### Midi Port IRQ

It allows you to select Midi IRQ if Midi is enabled.

The options are: 5, 10.

### Init Display First

When you install a PCI VGA card on the board, this feature allows you to select the first initiation of the monitor display from PCI or onboard AGP. The options are: PCI Slot, AGP.

### OnChip USB Controller

Disable this option if you are not using the onboard USB feature. The options are: All Disabled, All Enabled, 1&2 USB Port, 2&3 USB Port, 1 USB Port, 2 USB Port, 3 USB Port.


### USB Keyboard Support

When a USB keyboard is installed, please set at Enabled. The options are: Disabled, Enabled.

### IDE HDD Block Mode

When enabled, the system executes read/write requests to hard disk in block mode. The options are: Disabled, Enabled.

## Power Management Setup

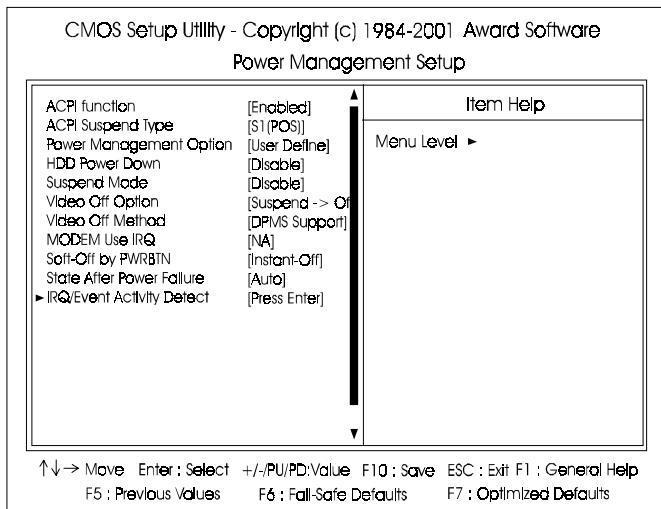

### ACPI function

This item allows you to disable the ACPI function.  
The options are: Enabled, Disabled.

### ACPI Suspend Type

This item allows you to select ACPI suspend types.  
The options are: S1 (POS), S3 (STR).

### Power Management

This item allows you to adjust the power management features.  
Select User Define for configuring your own power management features.  
Min Saving initiates all predefined timers in their minimum values. Max Saving, on the other hand, initiates maximum values. The options are: User Define, Min Saving, Max Saving.

### HDD Power Down

The option lets the BIOS turn the HDD motor off when system is in Suspend mode. Selecting 1 Min..15 Min allows you define the HDD idle time before the HDD enters the Power Saving Mode.

The options 1 Min..15 Min will not work concurrently. When HDD is in the Power Saving Mode, any access to the HDD will wake the HDD up.

The options are: Disable, 1 Min..15 Min.

### Suspend Mode

When disabled, the system will not enter Suspend mode. The specified time option defines the idle time the system takes before it enters Suspend mode. The options are: Disable, 1, 2, 4, 6, 8, 10, 20, 30, 40 Min, 1 Hour.

### Video Off Option

This feature provides the selections of the video display power saving mode. The option Suspend - Off allows the video display to go blank if the system enters Suspend mode. The option All Modes - Off allows the video display to go blank if the system enters Doze mode or Suspend mode. The option Always On allows the video display to stay in Standby mode even when the system enters Doze or Suspend mode.

The options are: Suspend - Off, All Modes -> Off, Always On.

### Video Off Method

The option *V/H SYNC+Blank* allows the BIOS to blank off screen display by turning off the V-Sync and H-Sync signals sent from add-on VGA card. *DPMS Support* allows the BIOS to blank off screen display by your add-on VGA card which supports DPMS (Display Power Management Signaling function). *Blank Screen* allows the BIOS to blank off screen display by turning off the red-green-blue signals.

The options are: V/H SYNC+Blank, DPMS Support, Blank Screen.

### MODEM Use IRQ

This feature allows you to select the IRQ# to meet your modem IRQ#.

The options are: NA, 3, 4, 5, 7, 9, 10, 11.

### Soft-Off by PWR-BTTN

The selection Delay 4 Sec. will allow the system shut down after 4 seconds after the power button is pressed. The selection Instant-Off will allow the system shut down immediately once the power button is pressed.

The settings are: Delay 4 Sec, Instant-Off.

### State After Power Failure

The item allows you to select the state that your personal computer returns to after a power failure. If set at Off, the system will not boot after a power failure. If set On, the system will restart after power failure.

The settings are: Auto, On, Off.

### IRQ/Event Activity Detect

#### PS2KB Wakeup Select

The item allows you to select PS/2 keyboard wakeup from password or hot key.

The settings are: Hot key, password.

#### PS2KB Wakeup from S3/S4/S5

The item allows you to set wakeup by pressing hot key.

The settings are: Disable, Ctrl + F1, ..., Ctrl + F12, Power.

### VGA

When set at On, any VGA activity will awake the system.

The options are: OFF, ON.

### LPT & COM

When LPT/COM is selected, any access of LPT and COM ports will awake the system. Likewise, either LPT or COM is chosen, the system will be awoken by any activity of LPT or COM port.

The options are: LPT/COM, LPT, COM, NONE.

### HDD & FDD

When it is set at ON, any access happened at hard drives and floppy drives will awake the system. The options are: OFF, ON.

### PCI Master

To set this feature at ON activates that Power Management feature (PM) wake-up event for the PCI bus master card.

The options are: OFF, ON.

### Wake Up On LAN

When set at Enabled, an input signal comes from the other client/server on the LAN awakes the system from a soft off state if connected over LAN.

The options are Disabled or Enabled.

### PowerOn by PCI Card

When set at Enabled, any PCI-PM event awakes the system from a PCI-PM controlled state.

The options are Disabled, Enabled.

### Modem Ring Resume

An input signal on the serial Ring Indicator (RI) line (in other words, an incoming call on the modem) awakens the system from a soft off state.

The options are: Enabled, Disabled.

### RTC Alarm Resume

*Enabled* allows you to set the time the system will be turned on from the system power-off status. The options are: Enabled, Disabled.

### Date (of Month)

This feature allows you to set the day of the alarm starts when the RTC Alarm Resume From Soft Off is set to be Enabled. The options are: 0, 1..31.

### Resume Time (hh:mm:ss)

If an ATX power supply is installed and when RTC Alarm Resume is Enabled, this feature allows you to set the time of the alarm starts when the RTC Alarm Resume From Soft Off is set to be Enabled.

The options are: hh (*hour*) - 0, 1, 2,..., 23; mm (*minute*) - 0, 1, 2,...,59; ss (*second*) - 0, 1, 2,...,59.

## IRQs Activity Monitoring

After the time period which you set, the system advances from doze mode to suspend mode in which the CPU clock stops and the screen display is off. At this moment, if the IRQ activity occurs, the system goes back to full-on mode directly.

If the IRQ activity which is defined as Non Primary takes place, the system remains off until the corresponding IRQ handler finishes.

The options of IRQ 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15 are: Enabled, Disabled.

## PnP/PCI Configurations

CMOS Setup Utility - Copyright (c) 1984-2001 Award Software

PnP/PCI Configurations

|                          |                 |   |
|--------------------------|-----------------|---|
| PnP OS Installed         | [ Yes ]         | <b>Item Help</b><br>Menu Level ►<br>Select Yes if you are using a Plug and Play capable operating system. Select No if you need the BIOS to configure non-boot devices. |
| Reset Configuration Data | [ Disabled ]    |   |
| Resources Controlled By  | [ Auto(ESCD) ]  |   |
| X IRQ Resources          | [ Press Enter ] |   |
| PCI/VGA Palette Snoop    | [ Disabled ]    |   |
| Assign IRQ For VGA       | [ Enabled ]     |   |
| INT Pin 1 Assignment     | [ Auto ]        |   |
| INT Pin 2 Assignment     | [ Auto ]        |   |
| INT Pin 3 Assignment     | [ Auto ]        |   |
| INT Pin 4 Assignment     | [ Auto ]        |   |

↑↓→ Move    Enter : Select    +/-/PU/PD/Value    F10 : Save    ESC : Exit    F1 : General Help  
 F5 : Previous Values    F6 : Fail-Safe Defaults    F7 : Optimized Defaults

### PNP OS Installed

If your operating system is a Plug-and-Play one, such as Windows NT, Windows 95, select Yes. The options are: No, Yes.

### Reset Configuration Data

Enabling it to reset the system Extended System Configuration Data (ESCD) when you exit Setup if you have installed a new add-on card and the system reconfiguration has caused such a serious conflict that the operating system can not boot. The options are: Disabled, Enabled.

### Resources Controlled By

If set at Auto, the BIOS arranges all system resources. If there exists conflict, select Manual. The options are: Auto (ESCD), Manual.

The manual options of **IRQ- / DMA-** assigned to are: PCI/ISA PnP, Legacy ISA.

### PCI/VGA Palette Snoop

Set this feature to be enabled if any ISA adapter card installed in the system requires the VGA palette snoop function.

The options are: Disabled, Enabled.

### Assign IRQ For VGA

If your PCI VGA card devices do not need an IRQ, select Disabled; therefore, an IRQ can be released for the system use.


The options are: Enabled, Disabled.

### INT Pin 1/2/3/4 Assignment

This feature allows you to assign the PCI IRQ numbers for PCI slots. Selecting the default, Auto, allows the PCI controller to automatically allocate the IRQ numbers.

The options are: Auto, 3, 4, 5, 7, 9, 10, 11, 12, 14, 15.

## PC Health Status

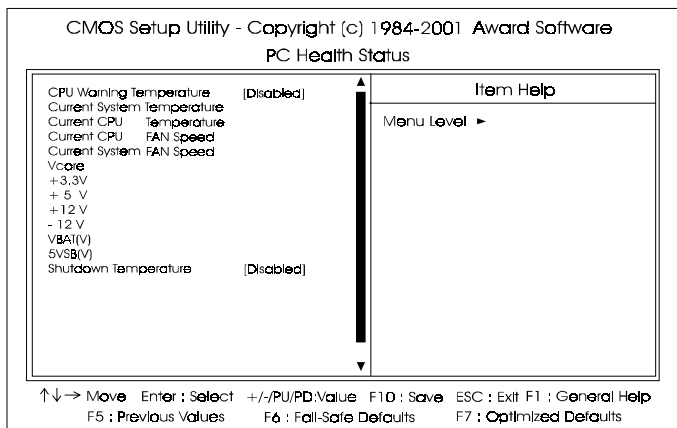

### CPU Warning Temperature

This feature allows you to set the temperature to slow down the CPU clock frequency.

The option list presents all the temperatures that supported by the board and Disabled.


### Current System Temperature / Current CPU Temperature / Current CPU FAN Speed / Current System FAN Speed / Vcore /+3.3V / +5V / +12V / -12V / VBAT(V) / 5VSB(V)

These items allow end users and technicians to monitor data provided by the BIOS on this mainboard. It is not user-configurable.

### Shutdown Temperature

This feature helps to shutdown the system when the system temperature is as high as the selected temperature to prevent from the overheat problem. The option list presents all the temperatures that supported by the board and Disabled.

## Frequency/Voltage Control

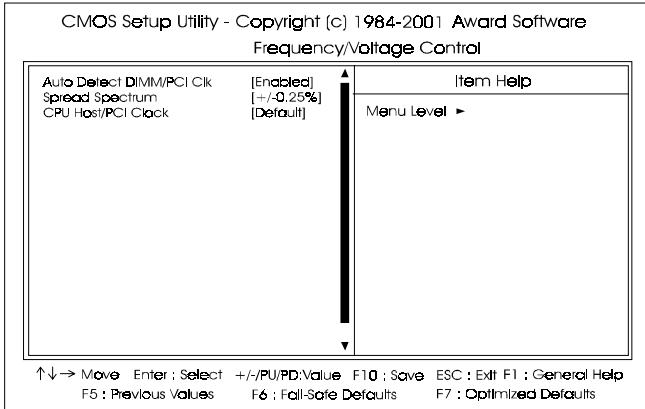

### Auto Detect DIMM/PCI Clk

When enabled, BIOS will detect the PCI slot and DIMM slot. If no any device in, BIOS will auto disable its clock.

The options are: Enabled, Disabled.

### Spread Spectrum

This feature is used to set the spread Spectrum to be center spread type or down spread type. The options are: Disabled, +/-0.25%, -0.5%, +/-0.5%, +/-0.38%,

### CPU Host/PCI Clock

This feature allows you to set the CPU/PCI clock frequency. The default setting, Default, will detect your CPU/PCI clock frequency automatically. If you set a inappropriate option which leads to a booting problem, keep pressing the Insert key until the display appears will solve it.

The option list offered all combinations that supported by this mainboard.

## Load Fail-Safe Defaults

This submenu is selected to diagnose the problem after the computer boots, if the computer will not boot. These settings do not give optimal performance.

## Load Optimized Defaults

This submenu is selected for default settings which provide the best system performance.

## Supervisor/User Password

To enable the Supervisor/User passwords, select the item from the Standard CMOS Setup. You will be prompted to create your own password. Type your password up to eight characters and press Enter. You will be asked to confirm the password. Type the password again and press Enter. To disable password, press Enter twice when you are prompted to enter a password. A message appears, confirming the password is disabled.

Under the BIOS Feature Setup, if *Setup* is selected under the Security Option field and the Supervisor/User Password is enabled, you will be prompted password every time you try to enter the CMOS Setup Utility. If *System* is selected and the Supervisor/User Password is enabled, you will be requested to enter the Password every time when you reboot the system or enter the CMOS Setup utility.

## Save and Exit Setup

After you have made changes under Setup, press Esc to return to the main menu. Move cursor to Save and Exit Setup or press F10 and then press Y to change the CMOS Setup. If you did not change anything, press Esc again or move cursor to Exit Without Saving and press Y to retain the Setup settings. The following message will appear at the center of the screen to allow you to save data to CMOS and exit the setup utility: **SAVE to CMOS and EXIT (Y/N)?**

## Exit without Saving

If you select this feature, the following message will appear at the center of the screen to allow you to exit the setup utility without saving CMOS modifications: **Quit Without Saving (Y/N)?**