

### Cyrix 6x86 CPUs




#### Frequency

Model Name	CPU Speed	External (CPU/CLK)	Internal CLK1	CLK2	CPU Clock Rate	FREQ1	FREQ2
6x86-P166+	133 MHz	66 MHz	1	1	2 x Ext.	1	1
6x86-P150+	120 MHz	60 MHz	1	1	2 x Ext.	1	1
6x86-P133+	110 MHz	55 MHz	1	1	2 x Ext.	1	1
6x86-P120+	100 MHz	50 MHz	1	1	2 x Ext.	1	1

#### Voltage

#### VR1

#### VR2

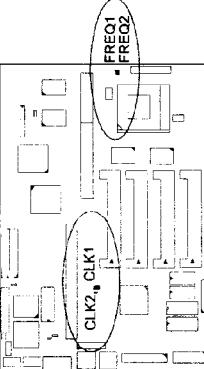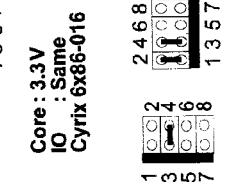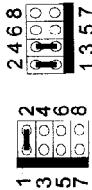


Core : 3.3V  
IO : Same  
Cyrix 6x86-016

6x86-P166+GP  
133 MHz  
3.52V (028)

Core : 3.4V-3.6V  
IO : Same  
Cyrix 6x86-028

(016) : 3.3V  
(028) : 3.52V

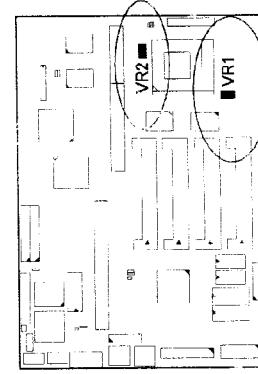

#### Installation of Cyrix CPU Fan

→ **WARNING :** When you install a Cyrix 6x86 CPU, the CPU's cooler model must be approved by Cyrix. Please make sure that the CPU's cooler model has been approved. Otherwise, your system may overheat.