



SRAM Module (256KB/512KB)

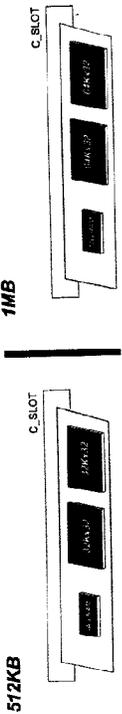


Cache Size	SRAM1	SRAM2
256K	1	1
512K	1	1

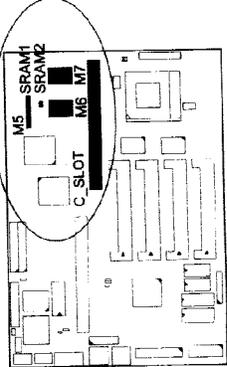


3). Install the CPU

The CPU module resides in a Zero Insertion Force (ZIF) socket on the mainboard. The figure below shows how to fit the CPU in the socket.

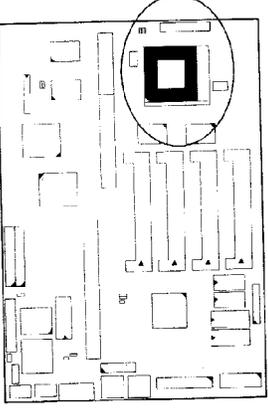

Socket Without CPU

Triangular Blank Area

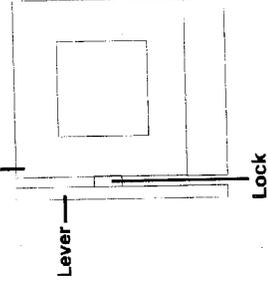

Socket With CPU

Notch

