


## IBM 6x86 CPUs

### Frequency

Model Name	CPU Speed	External (CPU/GCLK)	CLK1	CLK2	CPU Clock Rate	FREQ1	FREQ2
6x86-P166+	133 MHz	66 MHz	1	1	Internal	1	1
6x86-P150+	120 MHz	60 MHz	1	1	2 x Ext.	1	1
6x86-P133+	110 MHz	55 MHz	1	1	2 x Ext.	1	1
6x86-P120+	100 MHz	50 MHz	1	1	2 x Ext.	1	1

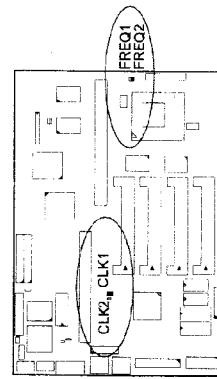

### Installation of IBM 6x86 CPU Fan

→ **WARNING :** When you install an IBM 6x86 CPU, the CPU's cooler model must be approved by IBM. Please make sure that the CPU's cooler model has been approved. Otherwise, your system may overheat.

## Voltage

### VR1

1	2	4	6	8
3	5	7	1	3
6	8			
7				

### VR2

(016) : 3.3V
(028) : 3.52V

