


27C256

1. Press the 'Device Selection Button' to select the device type. eg. 27C256
2. Set the DIP switch position 1,2,5,6,8,9 ON as above
3. Press the '?' to blank check the chip
4. Press the 'Program Button' (the icon with a IC & thunder) to program the chip
5. If the programming is successful, the status bar will shows 'Device program OK'

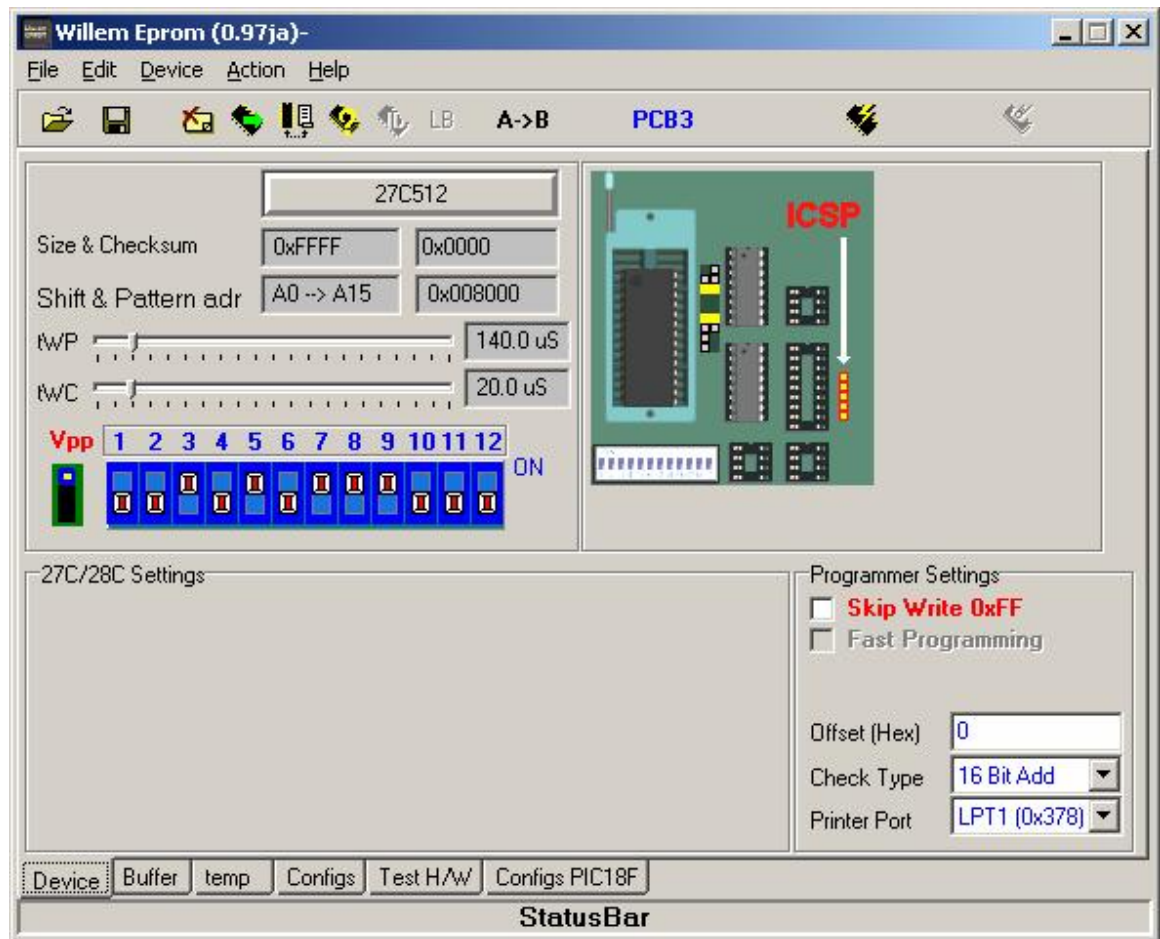

27C512

- 1 Press the 'Device Selection Button' to select the device type. eg. 27C512
- 2 Set the DIP switch position 3,5,7,8,9 ON as above
- 3 Press the '?' to blank check the chip
- 4 Press the 'Program Button' (the icon with a IC & thunder) to program the chip
- 5 If the programming is successful, the status bar will shows 'Device program OK'