




1

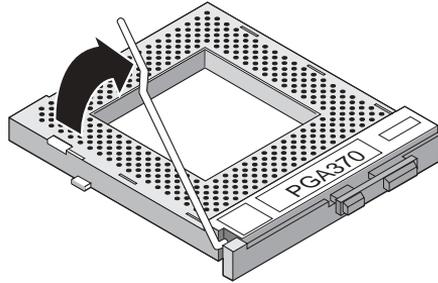

2

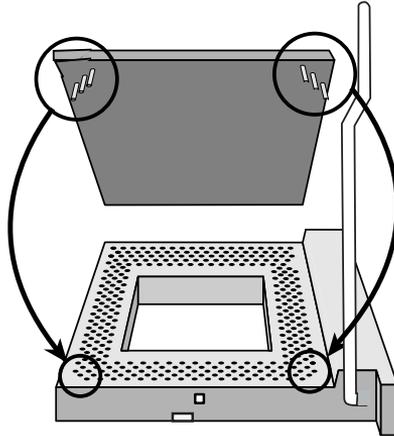


3

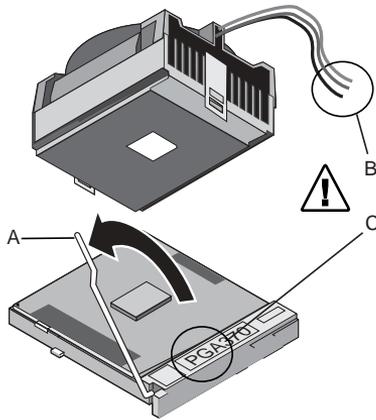

With the processor in the socket, close the handle (A). Place the fan heatsink on top of the processor. Be careful not to damage the thermal interface material. Align the fan cable (B) with the PGA370 mark on the processor socket (C).

4

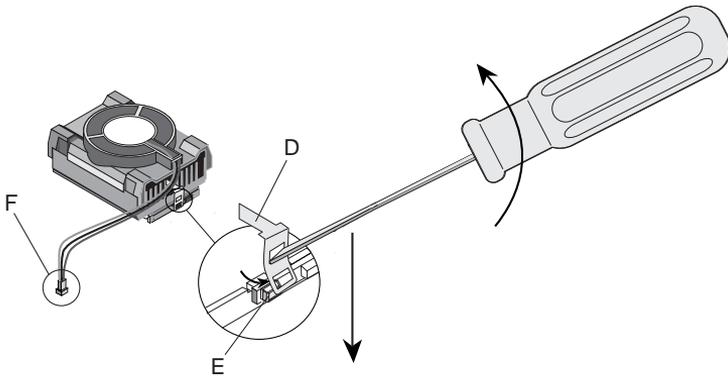

Attach the fan heatsink clip (D) to the processor socket (E). Connect the processor fan cable header (F) to the motherboard connector.